

Manufacturer	Model	System	Ecu name	Ecu name	Feature	Feature ID	Detail
"Mazda"	"121"	"Restraints"	"ECS - Electronic Crash Sensor"	"	"Live Parameters"	"1"	"Number of current diagnostic trouble codes"
"Mazda"	"121"	"Restraints"	"ECS - Electronic Crash Sensor"	"	"Live Parameters"	"2"	"Driver airbag"
"Mazda"	"121"	"Restraints"	"ECS - Electronic Crash Sensor"	"	"Live Parameters"	"3"	"Passenger airbag"
"Mazda"	"121"	"Restraints"	"ECS - Electronic Crash Sensor"	"	"Live Parameters"	"4"	"Sensor ground"
"Mazda"	"121"	"Restraints"	"ECS - Electronic Crash Sensor"	"	"Live Parameters"	"5"	"Driver pretensioner"
"Mazda"	"121"	"Restraints"	"ECS - Electronic Crash Sensor"	"	"Live Parameters"	"6"	"Passenger pretensioner"
"Mazda"	"121"	"Restraints"	"ECS - Electronic Crash Sensor"	"	"Live Parameters"	"7"	"Control unit power supply"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"1"	"Number of trouble codes"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"2"	"Glow plug control"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"3"	"Coolant temperature"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"4"	"Hot air fan"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"5"	"Water pump"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"6"	"Fuel pump"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"7"	"Glow plug"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"8"	"Combustion air fan, sluggish"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"9"	"Auxiliary heater request"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"10"	"Additional heater"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"11"	"Flame sensor"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"12"	"Status of supplementary heater"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"13"	"Power supply"
"Mazda"	"2"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"14"	"Undervoltage shutoff threshold"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Brake switch"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"DSC switch"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"Front left wheel speed sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"Front right wheel speed sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Rear left wheel speed sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Rear right wheel speed sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"7"	"Yaw rate"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"8"	"Lateral acceleration sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"9"	"Master cylinder pressure sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"10"	"Hydraulic pump"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"11"	"Inlet valve front left"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"12"	"Outlet valve front left"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"13"	"Inlet valve rear left"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"14"	"Outlet valve rear left"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"15"	"Inlet valve front right"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"16"	"Outlet valve front right"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"17"	"Inlet valve rear right"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"18"	"Outlet valve rear right"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"19"	"Left solenoid"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"20"	"Right solenoid"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"21"	"Traction control valve, left"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"22"	"Traction control valve, right"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"23"	"Vehicle speed"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"24"	"Supply voltage"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"Brake pedal"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"Front left wheel speed sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"Front right wheel speed sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Rear left wheel speed sensor"
"Mazda"	"2"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Rear right wheel speed sensor"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"1"	"Coolant temperature"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"2"	"Vehicle speed"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"3"	"IAT - Intake air temperature"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"4"	"MAF-sensor"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"5"	"DTC Count (includes those needing no action)"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"6"	"Number of trouble codes set due to diagnostic test"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"7"	"Injector cylinder 1"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"8"	"Injector cylinder 3"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"9"	"Injector cylinder 4"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"10"	"Injector cylinder 2"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"11"	"Brake signal"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"12"	"A/C clutch"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"13"	"AC high pressure switch"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"14"	"Fan 1"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"15"	"A/C Clutch Relay Control Circuit"

"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"16"	"Target idle speed"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"17"	"EGR pulse ratio"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"18"	"IAT-sensor"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"19"	"Coolant temperature sensor"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"20"	"Exhaust gas recirculation valve position"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"21"	"Revolution signal"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"22"	"Battery voltage"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"23"	"Throttle"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"24"	"Injection pulse width"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"25"	"Manifold absolute pressure"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"26"	"Inlet manifold pressure [input signal]"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"27"	"Atmospheric pressure"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"28"	"Glow plug control"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"29"	"Rail pressure"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"30"	"Fuel temperature"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"31"	"Alternator input duty cycle"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"32"	"Brake switch"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"33"	"Accelerator pedal sensor 1"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"34"	"Accelerator pedal sensor 2"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"35"	"Distance traveled since DTCs clear"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"36"	"Clutch pedal switch"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"37"	"Ignition"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"38"	"Number of keys"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"39"	"Security access"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"40"	"Outcode bit"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"41"	"PATS type of security access"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"42"	"Minimum number of keys required"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"43"	"PATS Security access time delay"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"44"	"Subkey"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"45"	"PCM ID Status Stored"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"46"	"Anti-scan function"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"47"	"Masterkey"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"48"	"EGR pulse ratio"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"49"	"Pre injection timing"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"50"	"Engine speed synchronization state"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"51"	"Fuel pressure enable for start"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"52"	"Injection quantity (torque control)"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"53"	"ECU operating state"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"54"	"Serial number 1"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"55"	"Serial number 2"
"Mazda"	"2"	"Engine Diesel"	"F6J 1.4 PCM"	"	"Live Parameters"	"56"	"Serial number 3"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"1"	"Coolant temperature"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"2"	"Throttle position"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"3"	"DTC Count (includes those needing no action)"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"4"	"Number of current diagnostic trouble codes"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"5"	"Throttle position sensor 1"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"6"	"Throttle position sensor 2"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"7"	"Generator requested"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"8"	"AC requested"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"9"	"Power steering pressure switch"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"10"	"Refrigerant pressure switch"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"11"	"AC pressure sensor"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"12"	"Electric fan speed 1"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"13"	"Electric fan speed 2"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"14"	"(MIL) control circuit"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"15"	"Intake Manifold Runner Control"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"16"	"A/C clutch"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"17"	"Time since last engine start"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"18"	"Engine speed, target value"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"19"	"IAT - Intake air temperature"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"20"	"Air inlet temperature sensor"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"21"	"Coolant temperature sensor"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"22"	"Short term fuel trim"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"23"	"Engine speed"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"24"	"Evap-valve"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"25"	"Spark advance"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"26"	"Supply voltage"

"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"27"	"Lambda sensor 1"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"28"	"Lambda sensor 2"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"29"	"Vehicle speed"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"30"	"Accelerator pedal"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"31"	"Fuel pulse width"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"32"	"Manifold absolute pressure"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"33"	"MAP sensor"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"34"	"ECM(Barometric pressure sensor)"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"35"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"36"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"37"	"Fuel system status"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"38"	"Generator field duty cycle"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"39"	"Accelerator pedal position 1"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"40"	"Accelerator pedal position 2"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"41"	"Fuel pump"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"42"	"Number of keys"
"Mazda"	"2"	"Engine Petrol"	"FUJ 1.25 PCM"	"	"Live Parameters"	"43"	"Anti-scan function"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"1"	"Coolant temperature"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"2"	"Throttle position"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"3"	"DTC Count (includes those needing no action)"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"4"	"Number of current diagnostic trouble codes"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"5"	"Throttle position sensor 1"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"6"	"Throttle position sensor 2"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"7"	"Generator requested"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"8"	"AC requested"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"9"	"Power steering pressure switch"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"10"	"Refrigerant pressure switch"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"11"	"AC pressure sensor"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"12"	"Electric fan speed 1"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"13"	"Electric fan speed 2"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"14"	"(MIL) control circuit"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"15"	"Intake Manifold Runner Control"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"16"	"A/C clutch"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"17"	"Time since last engine start"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"18"	"Engine speed, target value"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"19"	"IAT - Intake air temperature"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"20"	"Air inlet temperature sensor"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"21"	"Coolant temperature sensor"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"22"	"Short term fuel trim"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"23"	"Engine speed"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"24"	"Evap-valve"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"25"	"Spark advance"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"26"	"Supply voltage"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"27"	"Lambda sensor 1"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"28"	"Lambda sensor 2"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"29"	"Vehicle speed"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"30"	"Accelerator pedal"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"31"	"Fuel pulse width"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"32"	"Manifold absolute pressure"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"33"	"MAP sensor"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"34"	"ECM(Barometric pressure sensor)"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"35"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"36"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"37"	"Fuel system status"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"38"	"Generator field duty cycle"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"39"	"Accelerator pedal position 1"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"40"	"Accelerator pedal position 2"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"41"	"Fuel pump"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"42"	"Number of keys"
"Mazda"	"2"	"Engine Petrol"	"FXJ 1.4 PCM"	"	"Live Parameters"	"43"	"Anti-scan function"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"1"	"Coolant temperature"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"2"	"Throttle position"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"3"	"DTC Count (includes those needing no action)"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"4"	"Number of current diagnostic trouble codes"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"5"	"Throttle position sensor 1"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"6"	"Throttle position sensor 2"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"7"	"Generator requested"

"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"8"	"AC requested"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"9"	"Power steering pressure switch"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"10"	"Refrigerant pressure switch"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"11"	"AC pressure sensor"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"12"	"Electric fan speed 1"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"13"	"Electric fan speed 2"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"14"	"(MIL) control circuit"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"15"	"Intake Manifold Runner Control"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"16"	"A/C clutch"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"17"	"Time since last engine start"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"18"	"Engine speed, target value"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"19"	"IAT - Intake air temperature"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"20"	"Air inlet temperature sensor"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"21"	"Coolant temperature sensor"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"22"	"Short term fuel trim"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"23"	"Engine speed"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"24"	"Evap-valve"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"25"	"Spark advance"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"26"	"Supply voltage"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"27"	"Lambda sensor 1"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"28"	"Lambda sensor 2"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"29"	"Vehicle speed"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"30"	"Accelerator pedal"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"31"	"Fuel pulse width"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"32"	"Manifold absolute pressure"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"33"	"MAP sensor"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"34"	"ECM(Barometric pressure sensor)"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"35"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"36"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"37"	"Fuel system status"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"38"	"Generator field duty cycle"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"39"	"Accelerator pedal position 1"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"40"	"Accelerator pedal position 2"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"41"	"Fuel pump"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"42"	"Number of keys"
"Mazda"	"2"	"Engine Petrol"	"FYJ 1.6 PCM"	"	"Live Parameters"	"43"	"Anti-scan function"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"1"	"Manifold absolute pressure"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"2"	"Engine speed, target value"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"3"	"EGR valve stepping motor position"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"4"	"MAF (Mass Air Flow)"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"5"	"Camshaft position commanded duty cycle"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"6"	"Actual valve timing"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"7"	"Difference between target and actual valve timing"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"8"	"Coolant temperature"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"9"	"Alternator warning lamp"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"10"	"Lowest closed throttle voltage"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"11"	"Fuel pulse width"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"12"	"Lambda probe heating (bank 1, sensor 1)"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"13"	"Lambda probe heating (bank 1, sensor 2)"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"14"	"Rear lambda sensor, bank 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"15"	"Intake Manifold Runner Control"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"16"	"Maximum ECU temperature / Minimum voltage"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"17"	"A/C load"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"18"	"Knock control"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"19"	"Intake Manifold Runner Control"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"20"	"Accelerator pedal position 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"21"	"Accelerator pedal position 2"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"22"	"Throttle position sensor 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"23"	"Throttle position sensor 2"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"24"	"Electronic throttle control desired"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"25"	"Idle switch"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"26"	"Electronic throttle control actual"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"27"	"A/C Request signal"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"28"	"Air conditioning compressor cycling switch"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"29"	"Refrigerant pressure switch"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"30"	"Fan 1 control signal"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"31"	"Fan 2 control signal"

"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"32"	"Evaporative emission valve duty cycle"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"33"	"IAT - Intake air temperature"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"34"	"Generator field duty cycle"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"35"	"Alternator output voltage"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"36"	"Clutch pedal position switch"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"37"	"Clutch pedal position switch"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"38"	"In gear"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"39"	"Brake ON / OFF"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"40"	"Brake pressure switch"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"41"	"Evaporator temperature sensor"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"42"	"Fuel pump"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"43"	"Malfunction indicator lamp (MIL)"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"44"	"Evaporator temperature"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"45"	"PCM internal temperature"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"46"	"TEN (Datalink connector)"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"47"	"Air/fuel ratio"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"48"	"Actual air/fuel ratio"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"49"	"Fuel system status"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"50"	"Coolant temperature"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"51"	"Short term fuel trim 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"52"	"Long term fuel trim 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"53"	"Manifold absolute pressure"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"54"	"Engine speed"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"55"	"Vehicle speed"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"56"	"Spark advance"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"57"	"IAT - Intake air temperature"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"58"	"Air mass meter"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"59"	"Throttle position sensor 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"60"	"Lambda probe 1, bank 2"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"61"	"Distance driven with MIL on (km)"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"62"	"EGR Motor Position Desired"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"63"	"Lambda Equivalence Ratio"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"64"	"Lambda probe 1, bank 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"65"	"Control unit power supply"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"66"	"Engine load"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"67"	"Desired equivalence lambda ratio"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"68"	"Throttle valve relative position"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"69"	"Throttle position sensor 2"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"70"	"Accelerator pedal position 1"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"71"	"Accelerator pedal position 2"
"Mazda"	"2"	"Engine Petrol"	"ZJ 1.3 PCM"	"	"Live Parameters"	"72"	"Electronic throttle control desired"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"1"	"Brake fluid level"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"2"	"Button front fog lights"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"3"	"Oil pressure switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"4"	"Ignition 1"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"5"	"Rear defrost switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"6"	"Interior lights"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"7"	"Automatic light switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"8"	"Hazard warning flashers"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"9"	"High beam switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"10"	"Low beam switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"11"	"Exterior light switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"12"	"Turn lamp switch, left"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"13"	"Turn lamp switch, right"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"14"	"Front fog lights, relay"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"15"	"Relay, rear fog lamp"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"16"	"Button rear fog lights"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"17"	"Left flasher"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"18"	"Right flasher"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"19"	"Rear defroster indicator"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"20"	"Rear defroster"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"21"	"Key in ignition"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"22"	"Rain sensor"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"23"	"Wipers high speed"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"24"	"Wipers interval"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"25"	"Wipers slow speed"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"26"	"Rear wiper"

"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"27"	"Front wiper relay fast switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"28"	"Front wiper relay slow switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"29"	"Rear window wiper relay"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"30"	"Front washer"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"31"	"Rear washer"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"32"	"Door unlock actuators"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"33"	"Driver door switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"34"	"Left rear door contact switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"35"	"Passenger door switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"36"	"Right rear door contact switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"37"	"Key lock switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"38"	"Liftgate switch"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"39"	"Door lock actuators"
"Mazda"	"2"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"40"	"Vehicle speed"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Odometer"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Fuel level sensor"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"RPM-gauge"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Fuel gauge"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"Speedometer"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"6"	"Number of keys"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"7"	"Supply voltage"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Total number of diagnostic trouble codes"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Speedgauge"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"RPM-gauge"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Coolant temperature"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"CAN communication with ABS"
"Mazda"	"2"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"6"	"CAN communication with PCM"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Engine status"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Passenger seat belt reminder"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Driver buckle switch status"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Passenger buckle switch status"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Indicator lamp for passenger airbag disconnection"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Airbag, driver, stage 1"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Airbag, driver, stage 2"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Airbag, passenger, stage 1"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Airbag, passenger, stage 2"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Driver-side airbag safety curtain"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Passenger-side airbag safety curtain"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Driver side airbag"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Passenger side airbag"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Side impact sensor, driver"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Side impact sensor, passenger"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Crashsensor airbag front"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Drivers pretensioner"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Passenger pretensioner"
"Mazda"	"2"	"Restraints"	"Airbag"	"	"Live Parameters"	"15"	"Control unit power supply"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"1"	"Steering wheel rotational speed"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"2"	"Steering wheel angle sensor"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"3"	"Steering shaft torque 1"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"4"	"Steering shaft torque 2"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"5"	"Control unit power supply"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"6"	"ECU temp sensor diagnosis"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"7"	"Motor current"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"8"	"Engine speed"
"Mazda"	"2"	"Steering"	"EPS"	"	"Live Parameters"	"9"	"Vehicle speed"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"1"	"Number of trouble codes"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"2"	"Glow plug control"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"3"	"Coolant temperature"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"4"	"Hot air fan"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"5"	"Water pump"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"6"	"Fuel pump"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"7"	"Glow plug"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"8"	"Combustion air fan, sluggish"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"9"	"Auxiliary heater request"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"10"	"Additional heater"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"11"	"Flame sensor"

"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"12"	"Status of supplementary heater"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"13"	"Power supply"
"Mazda"	"3"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"14"	"Undervoltage shutoff threshold"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Brake switch"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"DSC status"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"DSC switch"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"Front left wheel speed sensor"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Front right wheel speed sensor"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Rear left wheel speed sensor"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"7"	"Rear right wheel speed sensor"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"8"	"Yaw rate"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"9"	"Lateral acceleration sensor initialization"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"10"	"Master cylinder pressure"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"11"	"Lateral accelerometer signal"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"12"	"Hydraulic pump motor"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"13"	"Inlet valve front left"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"14"	"Outlet valve front left"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"15"	"Inlet valve rear left"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"16"	"Outlet valve rear left"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"17"	"Inlet valve front right"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"18"	"Outlet valve front right"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"19"	"Inlet valve rear right"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"20"	"Outlet valve rear right"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"21"	"Stability control valve, left"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"22"	"Stability control valve, right"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"23"	"Traction control valve, left"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"24"	"Traction control valve, right"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"25"	"Steering angle"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"26"	"ECU power drivers"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"27"	"Outdoor temperature"
"Mazda"	"3"	"Brake System"	"ABS"	"	"Live Parameters"	"28"	"Vehicle speed"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"2"	"Brake pedal switch"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"3"	"Brake pressure sensor"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"4"	"TCS/ESP"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"5"	"TCS power switch"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"6"	"Steering angle sensor"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"7"	"Front left speed sensor"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"8"	"Front right speed sensor"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"9"	"Rear left speed sensor"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"10"	"Rear right speed sensor"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"11"	"Sensor supply voltage"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"12"	"Yaw rate value"
"Mazda"	"3"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"13"	"Lateral acceleration"
"Mazda"	"3"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"3"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"2"	"Brake pedal switch"
"Mazda"	"3"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"3"	"Rear right speed sensor"
"Mazda"	"3"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"4"	"Rear left speed sensor"
"Mazda"	"3"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"5"	"Front right speed sensor"
"Mazda"	"3"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"6"	"Front left speed sensor"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"1"	"MIL"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"2"	"Engine temperature"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"3"	"Manifold absolute pressure"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"4"	"Vehicle speed"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"5"	"IAT - Intake air temperature"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"6"	"Air mass meter"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"7"	"Distance driven with MIL warning lamp lit"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"8"	"Rail pressure"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"9"	"EGR - valve, duty cycle"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"10"	"DTC Count (includes those needing no action)"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"11"	"Exhaust Gas Recirculation (EGR) Throttle Valve"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"12"	"Charge pressure control valve"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"13"	"Pre-particulate filter temperature"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"14"	"A/C low pressure cycling switch"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"15"	"Differential pressure on particulate filter"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"16"	"Cooling circuit bypass valve duty cycle"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"17"	"Cooling circuit bypass valve position"

"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"18"	"Status of first learning of CAB Valve"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"19"	"Status of first learning of Exhaust Gas Recirculation (EGR) throttle valve"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"20"	"EGR Valve Learn"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"21"	"Status of last learning of CAB Valve"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"22"	"Learning of Exhaust Gas Recirculation (EGR) Valve Offset Value"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"23"	"Exhaust Gas Recirculation (EGR) throttle valve first learnt offset value"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"24"	"Cooling Air Bypass Valve First Learnt Offset Value"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"25"	"Exhaust gas recirculation valve position"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"26"	"Air conditioning signal"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"27"	"Brake"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"28"	"Gear engaged"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"29"	"Refrigerant pressure switch"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"30"	"Air conditioning compressor cycling switch"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"31"	"Throttle position"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"32"	"Target speed (rpm)"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"33"	"Rpm"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"34"	"ECU power drivers"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"35"	"Engine oil temperature"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"36"	"Accelerator pedal position"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"37"	"Net torque"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"38"	"Desired fuel quantity"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"39"	"Desired fuel quantity"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"40"	"Barometric pressure"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"41"	"Secondary throttle position duty cycle"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"42"	"Glow plug control"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"43"	"Fuel pump"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"44"	"Fuel rail temperature"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"45"	"Variable Fan Duty Cycle"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"46"	"Alternator monitoring signal"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"47"	"Tire size"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"48"	"Status of the starter relay activation"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"49"	"Oil pressure switch"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"50"	"CAN communication with IC"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"51"	"Engine speed synchronization"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"52"	"Fuel pressure enable for start"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"53"	"Distance remaining until particle filter replacement"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"54"	"Driving distance since regeneration"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"1"	"Coolant temperature"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"2"	"MAP sensor"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"3"	"Vehicle speed"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"4"	"IAT - Intake air temperature"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"5"	"MAF (Mass Air Flow)"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"6"	"Distance driven with MIL warning lamp lit"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"7"	"Rail pressure"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"8"	"DTC Count (includes those needing no action)"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"9"	"Particulate filter"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"10"	"Pressure difference between inlet and outlet in particle emission filter"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"11"	"AC switch"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"12"	"Brake"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"13"	"In gear"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"14"	"Power steering pressure switch"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"15"	"A/C clutch"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"16"	"Desired motor speed"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"17"	"Actual motor speed"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"18"	"Power supply"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"19"	"Accelerator pedal position"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"20"	"ECM(Barometric pressure sensor)"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"21"	"Fuel rail temperature sensor"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"22"	"Alternator load"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"23"	"Tire size"
"Mazda"	"3"	"Engine Diesel"	"Y6 1.6 PCM"	"	"Live Parameters"	"24"	"Oil pressure switch"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"6"	"Engine speed"

"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"8"	"Ignition timing"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"11"	"Throttle position"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"12"	"Lambda sensor 1"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"13"	"Short term fuel trim bank 1 sensor 1"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"14"	"Lambda sensor 2"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"15"	"Distance driven with MIL warning lamp lit"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"16"	"EGR Motor Position Desired"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"17"	"Purge rate, EVAP system"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"18"	"Catalytic converter temperature"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"19"	"Battery voltage"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"20"	"Engine load"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"21"	"Lambda target value, bank 1"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"22"	"Throttle valve relative position"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"23"	"DTC Count (includes those needing no action)"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"24"	"Number of current diagnostic trouble codes"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"25"	"MAP sensor"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"26"	"Variable Fan Duty Cycle"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"27"	"Alternator warning lamp"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"28"	"Desired motor speed"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"29"	"Generator requested"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"30"	"AC requested"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"31"	"Brake"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"32"	"In gear"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"33"	"Refrigerant pressure switch"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"34"	"(MIL) control circuit"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"35"	"Intake Manifold Runner Control"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"36"	"A/C clutch"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"37"	"Air inlet temperature sensor"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"38"	"Coolant temperature sensor"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"39"	"IAC (Idle air control)"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"40"	"Throttle position sensor"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"41"	"Lowest closed throttle voltage"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"42"	"MAF (Mass Air Flow)"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"43"	"Fuel pulse width"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"44"	"Intake manifold tuning valve"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"45"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"46"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"47"	"Fuel trim, Bank1 Sensor2"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"48"	"TEN (Datalink connector)"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"49"	"Alternator load"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"50"	"Generator output"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"51"	"Tire size"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"52"	"Readiness function code"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"53"	"Fuel pump"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"54"	"Knock control"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"55"	"Idle switch"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"56"	"Clutch pedal switch"
"Mazda"	"3"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"57"	"Clutch pedal switch"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"5"	"Engine speed"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"6"	"Vehicle speed"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"7"	"Ignition timing"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"8"	"IAT - Intake air temperature"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"9"	"MAF (Mass Air Flow)"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"10"	"Throttle position"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"11"	"Lambda sensor 1"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"12"	"Short term fuel trim bank 1 sensor 1"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"13"	"Lambda sensor 2"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"14"	"Distance driven with MIL warning lamp lit"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"15"	"Purge rate, EVAP system"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"16"	"Catalytic converter temperature"

"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"17"	"Battery voltage"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"18"	"Engine load"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"19"	"Lambda target value, bank 1"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"20"	"Throttle valve relative position"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"21"	"DTC Count (includes those needing no action)"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"22"	"Number of current diagnostic trouble codes"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"23"	"Variable Fan Duty Cycle"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"24"	"Alternator warning lamp"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"25"	"Desired motor speed"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"26"	"Generator requested"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"27"	"AC requested"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"28"	"Brake"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"29"	"In gear"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"30"	"Power steering pressure switch"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"31"	"Refrigerant pressure switch"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"32"	"Electric fan speed 1"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"33"	"Electric fan speed 2"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"34"	"(MIL) control circuit"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"35"	"Intake Manifold Runner Control"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"36"	"A/C clutch"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"37"	"Air inlet temperature sensor"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"38"	"Coolant temperature sensor"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"39"	"IAC (Idle air control)"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"40"	"Throttle position sensor"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"41"	"Lowest closed throttle voltage"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"42"	"MAF (Mass Air Flow)"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"43"	"Fuel pulse width"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"44"	"Intake manifold tuning valve"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"45"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"46"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"47"	"Fuel trim, Bank1 Sensor2"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"48"	"TEN (Datalink connector)"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"49"	"Camshaft angle, actual"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"50"	"Camshaft difference, request - actual"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"51"	"Camshaft actuator duty cycle"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"52"	"Alternator load"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"53"	"Generator output"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"54"	"Tire size"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"55"	"Readiness function code"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"56"	"Fuel pump"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"57"	"Knock control"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"58"	"ECU temperature"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"59"	"Maximum ECU temperature / Minimum voltage"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"60"	"Idle switch"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"61"	"Clutch pedal switch"
"Mazda"	"3"	"Engine Petrol"	"Z6 1.6 PCM"	"	"Live Parameters"	"62"	"Clutch pedal switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"1"	"Switch for parking brake"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"2"	"Reverse gear switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"3"	"Heated rear screen switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"4"	"Brake fluid level"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"5"	"Front fog light switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"6"	"Rear fog lights switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"7"	"High beam switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"8"	"Hazard warning flashers"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"9"	"Position Lamp Switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"10"	"Switch, direction indicator left"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"11"	"Switch, direction indicator right"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"12"	"Wiper High Speed Switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"13"	"Front Wiper Intermittent Switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"14"	"Wiper Low Speed Switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"15"	"Front Wiper Park Position Switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"16"	"Rear Wiper Intermittent Switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"17"	"Rear window wiper switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"18"	"Front wash switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"19"	"Tail wash switch"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"20"	"Door switch, driver door"
"Mazda"	"3"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"21"	"Door switch, left back door"

"Mazda"	"3'	"Generic electronic module'	"BCM/GEM'	"	"Live Parameters'	"22'	"Door switch, passenger door'
"Mazda"	"3'	"Generic electronic module'	"BCM/GEM'	"	"Live Parameters'	"23'	"Door switch, right back door'
"Mazda"	"3'	"Generic electronic module'	"BCM/GEM'	"	"Live Parameters'	"24'	"Door key switch lock'
"Mazda"	"3'	"Generic electronic module'	"BCM/GEM'	"	"Live Parameters'	"25'	"Door key switch unlock'
"Mazda"	"3'	"Generic electronic module'	"BCM/GEM'	"	"Live Parameters'	"26'	"Contact, trunk lid'
"Mazda"	"3'	"Generic electronic module'	"BCM/GEM'	"	"Live Parameters'	"27'	"Hood switch'
"Mazda"	"3'	"Generic electronic module'	"BCM/GEM'	"	"Live Parameters'	"28'	"ECU power drivers'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"1'	"Total number of diagnostic trouble codes'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"2'	"Liftgate switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"3'	"Trunk switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"4'	"Demanded rear defroster'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"5'	"Backup lamp switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"6'	"Switch, parking lights'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"7'	"Headlights'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"8'	"Wipers, front, high speed control'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"9'	"Front wipers intermittent requested'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"10'	"Rear wiper, interval'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"11'	"Washers, front, requested'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"12'	"High beam switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"13'	"Auxiliary heater request'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"14'	"Brake fluid level'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"15'	"Parking brake switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"16'	"Rear foglight button'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"17'	"Front foglight button'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"18'	"Switch, hazardwarning'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"19'	"Front Wiper park switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"20'	"Door switch, driver door'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"21'	"Door switch, passenger door'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"22'	"Door switch, left back door'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"23'	"Door switch, right back door'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"24'	"Hood switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"25'	"Driver door key lock switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"26'	"Driver door key unlock switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"27'	"Left flashers required'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"28'	"Right flashers required'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"29'	"Front wiper switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"30'	"Parking lights'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"31'	"Illumination ignition switch'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"32'	"Interior lights'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"33'	"Rear defroster indicator'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"34'	"Relay, rear fog lamp'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"35'	"Left indicator light'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"36'	"Right indicator light'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"37'	"Rear defroster relay'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"38'	"Relay motor remote unlocking trunk'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"39'	"Rheostat'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"40'	"Windscreen wiper intermittent setting'
"Mazda"	"3'	"Generic electronic module'	"GEM'	"	"Live Parameters'	"41'	"Control unit power supply'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"1'	"Tire pressure sensor 1'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"2'	"Tire pressure sensor 2'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"3'	"Tire pressure sensor 3'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"4'	"Tire pressure sensor 4'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"5'	"Fuel gauge, input'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"6'	"Tachometer'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"7'	"Fuel level sensor'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"8'	"Coolant temperature gauge'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"9'	"Speedometer'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"10'	"Number of Keys Registered in Module'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"11'	"ECU power drivers'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"1'	"Total number of diagnostic trouble codes'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"2'	"Speedgauge'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"3'	"RPM-gauge'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"4'	"Coolant temperature'
"Mazda"	"3'	"Instrument / Dashboard'	"IC'	"	"Live Parameters'	"5'	"Number of keys'
"Mazda"	"3'	"Other'	"FACM - Fuel Additiv Control Module'	"	"Live Parameters'	"1'	"Percentage Of Fuel Additive In Dosing Tank'
"Mazda"	"3'	"Other'	"FACM - Fuel Additiv Control Module'	"	"Live Parameters'	"2'	"Fuel Additive Tank Capacity'
"Mazda"	"3'	"Other'	"FACM - Fuel Additiv Control Module'	"	"Live Parameters'	"3'	"Additive Pump Driving State'

"Mazda"	"3"	"Other"	"FACM - Fuel Additiv Control Module"	"	"Live Parameters"	"4"	"Fuel cap"
"Mazda"	"3"	"Other"	"FACM - Fuel Additiv Control Module"	"	"Live Parameters"	"5"	"Additive Gauging State"
"Mazda"	"3"	"Other"	"FACM - Fuel Additiv Control Module"	"	"Live Parameters"	"6"	"Additive Tank Level Flag"
"Mazda"	"3"	"Other"	"FACM - Fuel Additiv Control Module"	"	"Live Parameters"	"7"	"Mass of Additive Used Since Last Filling"
"Mazda"	"3"	"Other"	"MID - Multi Information Display"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"3"	"Other"	"MID - Multi Information Display"	"	"Live Parameters"	"2"	"ECU power drivers"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Continuous Codes"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Driver airbag"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Passenger airbag"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver pretensioner"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Curtain side airbag, driver side"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Curtain side airbag, passenger side"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Driver lap strap pretensioner"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Driver airbag #2"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Passenger side airbag #2"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Driver side seat belt buckle switch,status"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Passenger side seat belt buckle switch,status"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Passenger-side air bag Cut-off switch"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Passenger airbag deployment status"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"15"	"Occupant classification system calibration"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"16"	"Occupant classification system control unit faulty communication"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"17"	"Occupant Classification Sensor, Passenger Side Left Front"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"18"	"Occupant classification system control unit"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"19"	"Occupant Classification Sensor, Passenger Side Right Front"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"20"	"Passenger Curtain Airbag"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"21"	"Driver Curtain Airbag"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"22"	"Occupant Classification Sensor, Measured Passenger Weight"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"23"	"Ignition, voltage"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Crash recordings"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Airbag, driver, stage 1"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Airbag, passenger, stage 1"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Driver pretensioner"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Passenger pretensioner"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Driver side airbag"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Passenger side airbag"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Airbag, driver, stage 2"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Airbag, passenger, stage 2"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Driver buckle switch status"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Switch to disable passenger airbag"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Passenger-side airbag safety curtain"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Driver-side airbag safety curtain"
"Mazda"	"3"	"Restraints"	"Airbag"	"	"Live Parameters"	"15"	"Control unit power supply"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"2"	"Engine speed"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"3"	"ECU power drivers"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"4"	"Vehicle speed"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"5"	"Pump motor"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"6"	"Actual pump motor revolution per minutes (RPM)"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"7"	"Target pump motor revolution per minutes (RPM)"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"8"	"Printed circuit board temperature"
"Mazda"	"3"	"Steering"	"EPS"	"	"Live Parameters"	"9"	"Steering angle"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"1"	"Number of trouble codes"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"2"	"Glow plug control"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"3"	"Coolant temperature"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"4"	"Hot air fan"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"5"	"Water pump"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"6"	"Fuel pump"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"7"	"Glow plug"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"8"	"Combustion air fan, sluggish"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"9"	"Auxiliary heater request"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"10"	"Additional heater"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"11"	"Flame sensor"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"12"	"Status of supplementary heater"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"13"	"Power supply"
"Mazda"	"5"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"14"	"Undervoltage shutoff threshold"

"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"2"	"Brake pedal switch"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"3"	"Brake pressure sensor"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"4"	"TCS/ESP"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"5"	"TCS power switch"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"6"	"Steering angle sensor"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"7"	"Front left speed sensor"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"8"	"Front right speed sensor"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"9"	"Rear left speed sensor"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"10"	"Rear right speed sensor"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"11"	"Sensor supply voltage"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"12"	"Yaw rate value"
"Mazda"	"5"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"13"	"Lateral acceleration"
"Mazda"	"5"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"5"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"2"	"Brake pedal switch"
"Mazda"	"5"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"3"	"Front left speed sensor"
"Mazda"	"5"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"4"	"Front right speed sensor"
"Mazda"	"5"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"5"	"Rear left speed sensor"
"Mazda"	"5"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"6"	"Rear right speed sensor"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"1"	"Coolant temperature"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"2"	"MAP sensor"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"3"	"Engine speed"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"4"	"Vehicle speed"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"5"	"MAF (Mass Air Flow)"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"6"	"Throttle position sensor 1"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"7"	"Distance driven with MIL warning lamp lit"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"8"	"Rail pressure"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"9"	"ECM(Barometric pressure sensor)"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"10"	"Catalytic converter temperature"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"11"	"Battery voltage"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"12"	"IAT - Intake air temperature"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"13"	"Accelerator pedal sensor 1"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"14"	"Accelerator pedal sensor 2"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"15"	"Electronic throttle control desired"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"16"	"DTC Count (includes those needing no action)"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"17"	"MAP sensor"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"18"	"Accelerator pedal sensor 1"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"19"	"Accelerator pedal sensor 2"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"20"	"Throttle position sensor 1"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"21"	"Electronic throttle control desired"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"22"	"Fan"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"23"	"Electronic throttle control actual"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"24"	"Alternator warning lamp"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"25"	"Generator requested"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"26"	"AC switch"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"27"	"Brake"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"28"	"In gear"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"29"	"Power steering pressure switch"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"30"	"(MIL) control circuit"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"31"	"A/C clutch"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"32"	"Coolant temperature sensor"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"33"	"MAF (Mass Air Flow)"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"34"	"Accelerator pedal position"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"35"	"Alternator load"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"36"	"Generator output"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"37"	"Tire size"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"38"	"Idle switch"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"39"	"Cruise control switch"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"40"	"Air inlet temperature sensor"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"41"	"Desired motor speed"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"42"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"5"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"43"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"5"	"MAP sensor"

"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"8"	"Ignition timing"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"11"	"Throttle position"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"12"	"Lambda sensor 1"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"13"	"Short term fuel trim bank 1 sensor 1"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"14"	"Lambda sensor 2"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"15"	"Distance driven with MIL warning lamp lit"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"16"	"EGR Motor Position Desired"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"17"	"Purge rate, EVAP system"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"18"	"Catalytic converter temperature"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"19"	"Battery voltage"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"20"	"Engine load"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"21"	"Lambda target value, bank 1"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"22"	"Throttle valve relative position"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"23"	"DTC Count (includes those needing no action)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"24"	"Number of current diagnostic trouble codes"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"25"	"MAP sensor"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"26"	"Variable Fan Duty Cycle"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"27"	"Alternator warning lamp"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"28"	"Desired motor speed"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"29"	"Generator requested"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"30"	"AC requested"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"31"	"Brake"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"32"	"In gear"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"33"	"Refrigerant pressure switch"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"34"	"(MIL) control circuit"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"35"	"Intake Manifold Runner Control"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"36"	"A/C clutch"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"37"	"Air inlet temperature sensor"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"38"	"Coolant temperature sensor"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"39"	"IAC (Idle air control)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"40"	"Throttle position sensor"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"41"	"Lowest closed throttle voltage"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"42"	"MAF (Mass Air Flow)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"43"	"Fuel pulse width"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"44"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"45"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"46"	"Fuel trim, Bank1 Sensor2"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"47"	"TEN (Datalink connector)"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"48"	"Alternator load"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"49"	"Generator output"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"50"	"Tire size"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"51"	"Readiness function code"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"52"	"Fuel pump"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"53"	"Knock control"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"54"	"Idle switch"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"55"	"Clutch pedal switch"
"Mazda"	"5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"56"	"Clutch pedal switch"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"2"	"Engine temperature"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"3"	"Short term fuel trim 1"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"4"	"Long term fuel trim 1"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"5"	"Manifold absolute pressure"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"6"	"Rpm"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"8"	"Spark advance"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"10"	"Air mass meter"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"11"	"Throttle position sensor 1"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"12"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"13"	"Distance driven with MIL warning lamp lit"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"14"	"Exhaust gas recirculation (EGR) valve, desired stepping motor position"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"15"	"Evaporative Emission Canister Purge, duty cycle"
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"16"	"Lambda (bank 1, sensor 1) Equivalence Ratio"

"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"17"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"18"	"Desired, catalyst temperature (bank 1, sensor 1)'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"19"	"ECU power drivers'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"20"	"Load'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"21"	"Lambda (bank 1, sensor 1) Desired Equivalence Ratio'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"22"	"Throttle valve relative position'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"23"	"Throttle position sensor 2'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"24"	"Accelerator pedal position 1'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"25"	"Accelerator pedal position 2'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"26"	"Electronic throttle control, desired'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"27"	"DTC Count (includes those needing no action)'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"28"	"Manifold absolute pressure'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"29"	"Accelerator pedal position 1'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"30"	"Accelerator pedal position 2'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"31"	"Throttle position sensor 1'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"32"	"Throttle position sensor 2'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"33"	"Electronic throttle control, desired'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"34"	"Variable Fan Duty Cycle'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"35"	"Electronic throttle control, actual'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"36"	"Alternator warning lamp'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"37"	"Target speed (rpm)'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"38"	"Alternator setpoint voltage'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"39"	"EGR valve stepping motor position'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"40"	"Air conditioning signal'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"41"	"Brake'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"42"	"Gear engaged'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"43"	"Refrigerant pressure switch'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"44"	"Intake Manifold Runner Control'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"45"	"MIL'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"46"	"Air conditioning compressor cycling switch'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"47"	"IAT - Intake air temperature'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"48"	"Engine temperature'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"49"	"Lowest closed throttle voltage'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"50"	"Air mass meter'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"51"	"Accelerator pedal position'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"52"	"Fuel pulse width'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"53"	"Intake manifold tuning valve'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"54"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"55"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"56"	"Rear Lambda Sensor Fuel Trim - Bank 1'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"57"	"TEN (Datalink connector)'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"58"	"Variable Valve Timing, Actual Position'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"59"	"Variable Valve Timing, differences between desired and actual value'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"60"	"Camshaft position sensor, requested duty cycle 1'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"61"	"Alternator monitoring signal'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"62"	"Alternator voltage'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"63"	"Tire size'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"64"	"Readiness function code'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"65"	"Fuel pump'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"66"	"Knock sensor'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"67"	"Air/fuel ratio'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"68"	"Actual air/fuel ratio'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"69"	"Brake pressure switch'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"70"	"Clutch position'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"71"	"Clutch pedal position sensor'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"72"	"Idle switch'
"Mazda"	"5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"73"	"Cruise control switch'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"1"	"Total number of diagnostic trouble codes'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"2"	"Liftgate switch'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"3"	"Switch, parking lights'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"4"	"Headlights'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"5"	"Wipers, front, high speed control'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"6"	"Front wipers intermittent requested'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"7"	"Rear wiper, interval'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"8"	"Washers, front, requested'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"9"	"Low brake fluid, parking brake warning lamp'
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"10"	"High beam switch'

"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"11"	"Parking brake switch"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"12"	"Rear foglight button"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"13"	"Switch, hazardwarning"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"14"	"Front Wiper park switch"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"15"	"Door switch, driver door"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"16"	"Door switch, passenger door"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"17"	"Door switch, right back door"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"18"	"Central locking, driver door"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"19"	"Left flashers required"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"20"	"Right flashers required"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"21"	"Front wiper switch"
"Mazda"	"5"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"22"	"Control unit power supply"
"Mazda"	"5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Total number of diagnostic trouble codes"
"Mazda"	"5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Speedgauge"
"Mazda"	"5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"RPM-gauge"
"Mazda"	"5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Coolant temperature"
"Mazda"	"5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"Number of keys"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Driver airbag"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Passenger airbag"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver pretensioner"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Driver side airbag"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Passenger side airbag"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Switch to disable passenger airbag"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Left side crash sensor circuit"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Right side crash sensor circuit"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Left side crash sensor communication"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Right side crash sensor communication"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Left side crash sensor internal fault"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Right side crash sensor internal fault"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"15"	"Left side crash sensor mount"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"16"	"Right side crash sensor mount"
"Mazda"	"5"	"Restraints"	"Airbag"	"	"Live Parameters"	"17"	"Control unit power supply"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"2"	"Engine speed"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"3"	"Power supply"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"4"	"Vehicle speed"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"5"	"Actual motor current"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"6"	"Pump engine speed, actual value"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"7"	"Pump engine speed desired value"
"Mazda"	"5"	"Steering"	"EPS"	"	"Live Parameters"	"8"	"Steering angle sensor"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"1"	"Ambient temperature"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"2"	"Water temperature"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"3"	"Operating voltage"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"4"	"Lower voltage limit"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"5"	"Heater fan switch"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"6"	"Glow plug control"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"7"	"Counters"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"8"	"Priming time"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"9"	"Supply voltage"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"10"	"Coolant temperature"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"11"	"Engine speed"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"1"	"Number of trouble codes"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"2"	"Glow plug control"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"3"	"Coolant temperature"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"4"	"Hot air fan"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"5"	"Water pump"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"6"	"Fuel pump"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"7"	"Glow plug"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"8"	"Combustion air fan, sluggish"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"9"	"Auxiliary heater request"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"10"	"Additional heater"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"11"	"Flame sensor"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"12"	"Status of supplementary heater"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"13"	"Power supply"
"Mazda"	"6"	"Additional/Stationary Heater"	"FFH - Fuel Fired Cooland Heating Module"	"	"Live Parameters"	"14"	"Undervoltage shutoff threshold"

"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Brake switch"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"Brake fluid level"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"Front left wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"Front right wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Rear left wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Rear right wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"7"	"Yaw rate"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"8"	"Lateral acceleration sensor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"9"	"Master cylinder pressure sensor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"10"	"Pump motor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"11"	"ABS inlet valve front left"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"12"	"ABS outlet valve front left"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"13"	"ABS inlet valve rear left"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"14"	"ABS outlet valve rear left"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"15"	"ABS inlet valve front right"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"16"	"ABS outlet valve front right"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"17"	"ABS inlet valve rear right"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"18"	"ABS outlet valve rear right"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"19"	"Stability control valve, left"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"20"	"Stability control valve, right"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"21"	"Steering wheel angle sensor"
"Mazda"	"6"	"Brake System"	"ABS"	"	"Live Parameters"	"22"	"Supply voltage"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"2"	"Engine speed"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"3"	"Gear selected"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"4"	"Front RH traction control valve"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"5"	"Front LH traction control valve"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"6"	"Right stability control outlet valve"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"7"	"Left stability control outlet valve"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"8"	"Brake fluid level"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"9"	"Brake pedal"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"10"	"Hydraulic pump ABS"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"11"	"ABS warning lamp"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"12"	"Brake system warning lamp"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"13"	"Outlet valve front left"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"14"	"Outlet valve front right"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"15"	"Outlet valve rear left"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"16"	"Outlet valve rear right"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"17"	"Inlet valve front left"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"18"	"Inlet valve front right"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"19"	"Inlet valve rear left"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"20"	"Inlet valve rear right"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"21"	"ABS motor relay"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"22"	"Valve relay, ABS"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"23"	"Steering angle, zero reference from ignition on"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"24"	"Front left wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"25"	"Front right wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"26"	"Rear left wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"27"	"Rear right wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"28"	"Lateral acceleration sensor"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"29"	"Yaw rate value"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"30"	"Master cylinder pressure sensor"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"31"	"Throttle position sensor status"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"32"	"CAN communication with PCM"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"33"	"CAN communication with IC"
"Mazda"	"6"	"Brake System"	"ABS with DSC"	"	"Live Parameters"	"34"	"Control unit power supply"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"2"	"Brake pedal"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"3"	"Hydraulic pump ABS"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"4"	"ABS warning lamp"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"5"	"Brake system warning lamp"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"6"	"Outlet valve front left"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"7"	"Outlet valve front right"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"8"	"Outlet valve rear left"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"9"	"Outlet valve rear right"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"10"	"Inlet valve front left"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"11"	"Inlet valve front right"

"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"12"	"Inlet valve rear left"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"13"	"Inlet valve rear right"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"14"	"ABS motor relay"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"15"	"Valve relay, ABS"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"16"	"Front left wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"17"	"Front right wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"18"	"Rear left wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"19"	"Rear right wheel speed sensor"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"20"	"CAN communication with PCM"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"21"	"CAN communication with IC"
"Mazda"	"6"	"Brake System"	"ABS without DSC"	"	"Live Parameters"	"22"	"Control unit power supply"
"Mazda"	"6"	"Climate Control"	"EATC"	"	"Live Parameters"	"1"	"Compartement temperature"
"Mazda"	"6"	"Climate Control"	"EATC"	"	"Live Parameters"	"2"	"Evaporator temperature"
"Mazda"	"6"	"Climate Control"	"EATC"	"	"Live Parameters"	"3"	"Solar radiation sensor, left"
"Mazda"	"6"	"Climate Control"	"EATC"	"	"Live Parameters"	"4"	"Solar radiation sensor, right"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"1"	"Manifold absolute pressure"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"2"	"Alternator setpoint voltage"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"3"	"EGR position"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"4"	"Fuel pump"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"5"	"Idle switch"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"6"	"Air mass meter"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"7"	"Rail pressure"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"8"	"Accelerator pedal position"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"9"	"Engine status"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"10"	"Boost temperature sensor"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"11"	"Engine temperature"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"12"	"Barometric pressure"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"13"	"Exhaust differential pressure"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"14"	"EGR position"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"15"	"Automatic regeneration"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"16"	"Forced regeneration"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"17"	"Status particle filter regeneration"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"18"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"19"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"20"	"Glow plug control"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"21"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"22"	"Exhaust temperature 1"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"23"	"Exhaust temperature 2"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"24"	"Exhaust gas recirculation (EGR) cooler, bypass valve"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"25"	"Exhaust differential pressure"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"26"	"Rail pressure, specified value"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"27"	"Charge pressure control valve"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"28"	"Engine oil deteriorated"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"29"	"EGR position"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"30"	"Position Sensor, Variabel Turbocharger Boost Control"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"31"	"Air mass reference value"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"32"	"Sedimentor Switch"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"33"	"Fuel injection pump flow control"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"34"	"Fuel injection pump control valve"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"35"	"Particulate matter accumulation"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"36"	"PM generation"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"37"	"Exhaust gas flow"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"38"	"Fuel injection pump request"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"39"	"Regeneration counter"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"40"	"Fuel injection pump request"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"41"	"Driving distance since regeneration"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"42"	"Number of engine oil deteriorated events"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"43"	"Fuel injection learning value (fuel injection valve 1 at 35 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"44"	"Fuel injection learning value (fuel injection valve 2 at 35 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"45"	"Fuel injection learning value (fuel injection valve 3 at 35 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"46"	"Fuel injection learning value (fuel injection valve 4 at 35 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"47"	"Fuel injection learning value (fuel injection valve 1 at 65 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"48"	"Fuel injection learning value (fuel injection valve 2 at 65 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"49"	"Fuel injection learning value (fuel injection valve 3 at 65 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"50"	"Fuel injection learning value (fuel injection valve 4 at 65 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"51"	"Fuel injection learning value (fuel injection valve 1 at 100 MPa)"
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"52"	"Fuel injection learning value (fuel injection valve 2 at 100 MPa)"

"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"53"	"Fuel injection learning value (fuel injection valve 3 at 100 MPa)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"54"	"Fuel injection learning value (fuel injection valve 4 at 100 MPa)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"55"	"Fuel injection learning value (fuel injection valve 1 at 140 MPa)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"56"	"Fuel injection learning value (fuel injection valve 2 at 140 MPa)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"57"	"Fuel injection learning value (fuel injection valve 3 at 140 MPa)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"58"	"Fuel injection learning value (fuel injection valve 4 at 140 MPa)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"59"	"Lambda Sensor, bank 1 sensor 1 calibration Value'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"60"	"Lambda sensor activation (bank 1, sensor 1)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"61"	"Particulate matter (PM) accumulation, desired'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"62"	"oxygen (O2) concentration Exhaust'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"63"	"Position Sensor, Variabel Turbocharger Boost Control'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"64"	"Distance driven since last oil change'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"65"	"Fuel injection pump, learning programming quantity'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"66"	"Fuel injection pump, learning programming quantity'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"67"	"Fuel temperature'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"68"	"Intake shatter valve learning value - closed'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"69"	"EGR valve learning value'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"70"	"Distance Since Last Oil Change 2 (Correction Value)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"71"	"Accelerator pedal position 1'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"72"	"Accelerator pedal position 2'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"73"	"Intake solenoid valve position'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"74"	"Intake solenoid valve desired value'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"75"	"Intake solenoid valve actual value'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"76"	"Air conditioning compressor'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"77"	"A/C pressure'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"78"	"Refrigerant pressure switch'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"79"	"Fan 1'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"80"	"Fan 2'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"81"	"Fan 3 Control Circuit'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"82"	"Charge air pressure, specified value'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"83"	"Injection quantity, demand'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"84"	"Alternator monitoring signal'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"85"	"Alternator voltage'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"86"	"Torque correction at idle'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"87"	"Clutch position'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"88"	"Gear engaged'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"89"	"Brake'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"90"	"DSC status'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"91"	"Speed Control, Cancel Switch'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"92"	"Cruise control switch
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"93"	"Cruise control switch
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"94"	"Cruise control switch
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"95"	"Set cruise acceleration (+)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"96"	"Set cruise deceleration (-)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"97"	"Alternator warning lamp'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"98"	"Cruise control lamp'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"99"	"Glow plug lamp'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"100"	"MIL'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"101"	"Air conditioning signal'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"102"	"Cruise control switch'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"103"	"Injector learning module failure code 1'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"104"	"Injector learning module failure code 2'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"105"	"Load'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"106"	"Engine temperature'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"107"	"Manifold absolute pressure'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"108"	"Rpm'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"109"	"Vehicle speed'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"110"	"Boost temperature sensor'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"111"	"Air mass meter'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"112"	"Intake solenoid valve position'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"113"	"Distance driven with MIL warning lamp lit'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"114"	"Rail pressure'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"115"	"Barometric pressure'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"116"	"Lambda (bank 1, sensor 1) Equivalence Ratio'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"117"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"118"	"Exhaust temperature 1'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters"	"119"	"Exhaust temperature 2'

"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters'	"120"	"ECU power drivers'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters'	"121"	"IAT - Intake air temperature'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters'	"122"	"Accelerator pedal position 1'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters'	"123"	"Accelerator pedal position 2'
"Mazda"	"6"	"Engine Diesel"	"R2_T 2.2 PCM"	"	"Live Parameters'	"124"	"Intake solenoid valve desired value'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"1"	"Coolant temperature'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"2"	"MAP sensor'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"3"	"Engine speed'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"4"	"Vehicle speed'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"5"	"IAT - Intake air temperature'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"6"	"MAF (Mass Air Flow)'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"7"	"Rail pressure'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"8"	"DTC Count (includes those needing no action)'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"9"	"MAP sensor'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"10"	"Electric fan speed 3'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"11"	"AC switch'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"12"	"Brake'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"13"	"In gear'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"14"	"Power steering pressure switch'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"15"	"Refrigerant pressure switch'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"16"	"Electric fan speed 1'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"17"	"Electric fan speed 2'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"18"	"(MIL) control circuit'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"19"	"A/C clutch'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"20"	"Air inlet temperature sensor'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"21"	"Coolant temperature sensor'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"22"	"Supply voltage'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"23"	"Atmospheric pressure'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"24"	"Injector Control Pressure Sensor Circuit'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"25"	"MAF (Mass Air Flow)'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"26"	"Rail pressure'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"27"	"Fuel temperature sensor'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"28"	"Clutch pedal switch'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"29"	"Clutch or P/N switch'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"30"	"Cruise control'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"31"	"PCM main relay'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"32"	"Accelerator pedal position 1'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"33"	"Accelerator pedal position 2'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"34"	"Idle switch'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"35"	"Programmed keys'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"36"	"Fuel temperature'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"37"	"Glow plug'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"38"	"Desired motor speed'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"39"	"Desired fuel for torque-down control'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"40"	"Desired boost pressure'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"41"	"Calibration resistor 1'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"42"	"Calibration resistor 2'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"43"	"Calibration resistor 3'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"44"	"Calibration resistor 4'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"45"	"Temporary'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"46"	"Temporary'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (->2004/06) PCM'	"	"Live Parameters'	"47"	"Glowplug, control circuit'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"1"	"Coolant temperature'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"2"	"MAP sensor'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"3"	"Engine speed'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"4"	"Vehicle speed'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"5"	"IAT - Intake air temperature'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"6"	"MAF (Mass Air Flow)'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"7"	"Throttle position sensor 1'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"8"	"Distance driven with MIL warning lamp lit'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"9"	"Rail pressure'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"10"	"ECM(Barometric pressure sensor)'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"11"	"Catalytic converter temperature'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"12"	"Battery voltage'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"13"	"Accelerator pedal sensor 1'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"14"	"Accelerator pedal sensor 2'
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM'	"	"Live Parameters'	"15"	"Electronic throttle control desired'

"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"16"	"DTC Count (includes those needing no action)'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"17"	"MAP sensor'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"18"	"Accelerator pedal sensor 1'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"19"	"Accelerator pedal sensor 2'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"20"	"Throttle position sensor 1'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"21"	"Electronic throttle control desired'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"22"	"Electronic throttle control actual'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"23"	"Electric fan speed 3'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"24"	"Alternator warning lamp'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"25"	"Desired motor speed'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"26"	"Generator requested'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"27"	"Pressure difference between inlet and outlet in particle emission filter'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"28"	"AC switch'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"29"	"Brake'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"30"	"In gear'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"31"	"Power steering pressure switch'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"32"	"Electric fan speed 1'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"33"	"Electric fan speed 2'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"34"	"(MIL) control circuit'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"35"	"A/C clutch'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"36"	"Air inlet temperature sensor'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"37"	"Coolant temperature sensor'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"38"	"MAF (Mass Air Flow)'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"39"	"Accelerator pedal position'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"40"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"41"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"42"	"Alternator load'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"43"	"Generator output'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"44"	"Tire size'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"45"	"Idle switch'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"46"	"Cruise control switch'"
"Mazda"	"6"	"Engine Diesel"	"RF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"47"	"Programmed keys'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"1"	"Manifold absolute pressure'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"2"	"Alternator setpoint voltage'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"3"	"EGR position'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"4"	"Fuel pump'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"5"	"Idle switch'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"6"	"Air mass meter'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"7"	"Rail pressure'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"8"	"Accelerator pedal position'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"9"	"Engine status'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"10"	"Boost temperature sensor'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"11"	"Engine temperature'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"12"	"Barometric pressure'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"13"	"Exhaust differential pressure'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"14"	"EGR position'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"15"	"Automatic regeneration'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"16"	"Forced regeneration'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"17"	"Status particle filter regeneration'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"18"	"Lambda sensor heater circuit (sensor 1, bank 1)'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"19"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"20"	"Glow plug control'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"21"	"IAT - Intake air temperature'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"22"	"Exhaust temperature 1'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"23"	"Exhaust temperature 2'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"24"	"Exhaust temperature 3'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"25"	"Exhaust differential pressure'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"26"	"Rail pressure, specified value'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"27"	"Charge pressure control valve'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"28"	"EGR position'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"29"	"Fuel injection pump flow control'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"30"	"Fuel injection pump control valve'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"31"	"Particulate matter accumulation'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"32"	"PM generation'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"33"	"Exhaust gas flow'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"34"	"Fuel injection pump request'"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"35"	"Regeneration counter'"

"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"36"	"Fuel injection pump request"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"37"	"Number of engine oil deteriorated events"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"38"	"Fuel injection learning value (fuel injection valve 1 at 35 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"39"	"Fuel injection learning value (fuel injection valve 2 at 35 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"40"	"Fuel injection learning value (fuel injection valve 3 at 35 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"41"	"Fuel injection learning value (fuel injection valve 4 at 35 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"42"	"Fuel injection learning value (fuel injection valve 1 at 65 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"43"	"Fuel injection learning value (fuel injection valve 2 at 65 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"44"	"Fuel injection learning value (fuel injection valve 3 at 65 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"45"	"Fuel injection learning value (fuel injection valve 4 at 65 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"46"	"Fuel injection learning value (fuel injection valve 1 at 100 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"47"	"Fuel injection learning value (fuel injection valve 2 at 100 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"48"	"Fuel injection learning value (fuel injection valve 3 at 100 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"49"	"Fuel injection learning value (fuel injection valve 4 at 100 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"50"	"Fuel injection learning value (fuel injection valve 1 at 140 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"51"	"Fuel injection learning value (fuel injection valve 2 at 140 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"52"	"Fuel injection learning value (fuel injection valve 3 at 140 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"53"	"Fuel injection learning value (fuel injection valve 4 at 140 MPa)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"54"	"Lambda sensor activation (bank 1, sensor 1)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"55"	"Fuel injection pump, learning programming quantity'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"56"	"Fuel injection pump, learning programming quantity'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"57"	"Fuel temperature'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"58"	"Intake solenoid valve learning value - closed'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"59"	"EGR valve learning value'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"60"	"Accelerator pedal position 1'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"61"	"Accelerator pedal position 2'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"62"	"Intake solenoid valve position'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"63"	"Intake solenoid valve desired value'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"64"	"Intake solenoid valve actual value'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"65"	"Air conditioning compressor'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"66"	"Fan 1'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"67"	"Fan 2'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"68"	"Charge air pressure, specified value'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"69"	"Injection quantity, demand'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"70"	"Alternator monitoring signal'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"71"	"Alternator voltage'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"72"	"Clutch position'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"73"	"Gear engaged'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"74"	"Brake'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"75"	"DSC status'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"76"	"Cruise control"	""
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"77"	"Cruise control switch"	""
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"78"	"Cruise control switch"	""
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"79"	"Cruise control switch"	""
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"80"	"Set cruise acceleration (+)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"81"	"Set cruise deceleration (-)'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"82"	"Alternator warning lamp'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"83"	"Cruise control lamp'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"84"	"Glow plug lamp'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"85"	"MIL'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"86"	"Air conditioning signal'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"87"	"Cruise control switch'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"88"	"Injector learning module failure code 1'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"89"	"Injector learning module failure code 2'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"90"	"Load'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"91"	"Engine temperature'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"92"	"Manifold absolute pressure'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"93"	"Rpm'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"94"	"Vss'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"95"	"Boost temperature sensor'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"96"	"Air mass meter'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"97"	"Intake solenoid valve position'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"98"	"Distance driven with MIL warning lamp lit'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"99"	"Rail pressure'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"100"	"Barometric pressure'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"101"	"Lambda Equivalence Ratio'"	
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"102"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)'"	

"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"103"	"Exhaust temperature 1"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"104"	"Exhaust temperature 2"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"105"	"Exhaust temperature 3"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"106"	"ECU power drivers"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"107"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"108"	"Accelerator pedal position 1"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"109"	"Accelerator pedal position 2"
"Mazda"	"6"	"Engine Diesel"	"RF_T 2.0 PCM"	"	"Live Parameters"	"110"	"Intake solenoid valve desired value"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"8"	"Ignition timing"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"11"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"12"	"Distance driven with MIL warning lamp lit"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"13"	"Purge rate, EVAP system"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"14"	"Manifold Absolute Pressure/Barometric Pressure Circuit"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"15"	"Battery voltage"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"16"	"Engine load"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"17"	"Throttle valve relative position"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"18"	"DTC Count (includes those needing no action)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"19"	"Number of current diagnostic trouble codes"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"20"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"21"	"Electric fan speed 3"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"22"	"Speed control set indicator"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"23"	"Alternator warning lamp"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"24"	"Desired motor speed"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"25"	"Alternator voltage"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"26"	"EGR valve position recopy"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"27"	"Intake air shut-off solenoid valve"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"28"	"AC switch"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"29"	"Brake switch"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"30"	"In gear"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"31"	"Power steering pressure switch"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"32"	"Refrigerant pressure switch"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"33"	"Cooling fan"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"34"	"(MIL) control circuit"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"35"	"A/C clutch"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"36"	"Air inlet temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"37"	"Coolant temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"38"	"IAC (Idle air control)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"39"	"Throttle position sensor"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"40"	"Lowest closed throttle voltage"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"41"	"Lambda probe 1, bank 1"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"42"	"Lambda probe 1, bank 1"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"43"	"Lambda probe 2, bank 1"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"44"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"45"	"Fuel pulse width"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"46"	"Intake manifold tuning valve"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"47"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"48"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"49"	"Fuel Trim (Bank 1)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"50"	"TEN (Datalink connector)"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"51"	"Camshaft angle, actual"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"52"	"Camshaft difference, request - actual"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"53"	"Camshaft actuator duty cycle"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"54"	"Alternator load"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"55"	"Alternator voltage"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"56"	"Tire size"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"57"	"Readiness function code"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"58"	"Knock control"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"59"	"Idle switch"

"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"60"	"Clutch pedal switch"
"Mazda"	"6"	"Engine Petrol"	"L3 2.3 (2004/06->) PCM"	"	"Live Parameters"	"61"	"Programmed keys"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"1"	"Manifold absolute pressure"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"2"	"Target speed (rpm)"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"3"	"EGR valve stepping motor position"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"4"	"Air mass meter"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"5"	"Camshaft position sensor, requested duty cycle 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"6"	"Variable Valve Timing, Actual Position"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"7"	"Variable Valve Timing, differences between desired and actual value"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"8"	"Engine temperature"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"9"	"Alternator warning lamp"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"10"	"Lowest closed throttle voltage"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"11"	"Fuel pulse width"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"12"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"13"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"14"	"Rear Lambda Sensor Fuel Trim - Bank 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"15"	"Knock sensor"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"16"	"Intake Manifold Runner Control"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"17"	"Intake manifold tuning valve"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"18"	"Accelerator pedal position 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"19"	"Accelerator pedal position 2"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"20"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"21"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"22"	"Electronic throttle control, desired"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"23"	"Idle switch"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"24"	"Electronic throttle control, actual"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"25"	"Air conditioning compressor cycling switch"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"26"	"Air conditioning signal"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"27"	"Refrigerant pressure switch"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"28"	"Fan 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"29"	"Fan 2"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"30"	"Fan 3 Control Circuit"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"31"	"Intake air shutter valve"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"32"	"Evaporative Emission Canister Purge, duty cycle"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"33"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"34"	"Alternator monitoring signal"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"35"	"Alternator voltage"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"36"	"Clutch pedal position sensor"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"37"	"Clutch position"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"38"	"Gear engaged"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"39"	"Brake"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"40"	"Brake pressure switch"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"41"	"Fuel pump"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"42"	"MIL"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"43"	"Cruise control switch"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"44"	"TEN (Datalink connector)"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"45"	"Air/fuel ratio"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"46"	"Actual air/fuel ratio"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"47"	"Fuel system status"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"48"	"Engine temperature"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"49"	"Short term fuel trim 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"50"	"Long term fuel trim 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"51"	"Manifold absolute pressure"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"52"	"Rpm"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"53"	"Vehicle speed"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"54"	"Spark advance"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"55"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"56"	"Air mass meter"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"57"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"58"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"59"	"Distance driven with MIL warning lamp lit"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"60"	"Exhaust gas recirculation (EGR) valve, desired stepping motor position"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"61"	"Lambda (bank 1, sensor 1) Equivalence Ratio"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"62"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"63"	"Desired, catalyst temperature (bank 1, sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"64"	"ECU power drivers"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"65"	"Load"

"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"66"	"Lambda (bank 1, sensor 1) Desired Equivalence Ratio"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"67"	"Throttle valve relative position"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"68"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"69"	"Accelerator pedal position 1"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"70"	"Accelerator pedal position 2"
"Mazda"	"6"	"Engine Petrol"	"L5 2.5 PCM"	"	"Live Parameters"	"71"	"Electronic throttle control, desired"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"8"	"Ignition timing"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"11"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"12"	"Lambda probe 1, bank 2"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"13"	"Short term fuel trim bank 1 sensor 2"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"14"	"Distance driven with MIL warning lamp lit"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"15"	"EGR Motor Position Desired"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"16"	"Purge rate, EVAP system"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"17"	"Lambda probe 1, bank 1"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"18"	"Lambda Equivalence Ratio"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"19"	"Catalytic converter temperature"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"20"	"Battery voltage"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"21"	"Engine load"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"22"	"Desired equivalence lambda ratio"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"23"	"Throttle valve relative position"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"24"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"25"	"Accelerator pedal sensor 1"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"26"	"Accelerator pedal sensor 2"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"27"	"Electronic throttle control desired"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"28"	"DTC Count (includes those needing no action)"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"29"	"Number of current diagnostic trouble codes"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"30"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"31"	"Accelerator pedal sensor 1"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"32"	"Accelerator pedal sensor 2"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"33"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"34"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"35"	"Electronic throttle control desired"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"36"	"Electronic throttle control actual"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"37"	"Electric fan speed 3"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"38"	"Alternator warning lamp"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"39"	"Desired motor speed"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"40"	"Generator requested"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"41"	"AC switch"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"42"	"Brake"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"43"	"In gear"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"44"	"Power steering pressure switch"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"45"	"Refrigerant pressure switch"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"46"	"Electric fan speed 1"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"47"	"Electric fan speed 2"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"48"	"(MIL) control circuit"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"49"	"Intake Manifold Runner Control"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"50"	"A/C clutch"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"51"	"Air inlet temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"52"	"Coolant temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"53"	"Lowest closed throttle voltage"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"54"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"55"	"Accelerator pedal position"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"56"	"Fuel pulse width"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"57"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"58"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"59"	"Fuel Trim (Bank 1)"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"60"	"TEN (Datalink connector)"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"61"	"Alternator load"

"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"62"	"Generator output"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"63"	"Tire size"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"64"	"Readiness function code"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"65"	"Knock control"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"66"	"Desired lambda value"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"67"	"Lambda value"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"68"	"Idle switch"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"69"	"Clutch pedal switch"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"70"	"Cruise control switch"
"Mazda"	"6"	"Engine Petrol"	"L8 1.8 (2004/06->) PCM"	"	"Live Parameters"	"71"	"Programmed keys"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"8"	"Ignition timing"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"11"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"12"	"Distance driven with MIL warning lamp lit"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"13"	"Purge rate, EVAP system"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"14"	"Battery voltage"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"15"	"Engine load"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"16"	"Throttle valve relative position"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"17"	"DTC Count (includes those needing no action)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"18"	"Number of current diagnostic trouble codes"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"19"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"20"	"Electric fan speed 3"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"21"	"Alternator warning lamp"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"22"	"Desired motor speed"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"23"	"Generator requested"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"24"	"AC switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"25"	"Brake"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"26"	"In gear"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"27"	"Power steering pressure switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"28"	"Electric fan speed 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"29"	"Electric fan speed 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"30"	"(MIL) control circuit"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"31"	"Intake Manifold Runner Control"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"32"	"A/C clutch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"33"	"Air inlet temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"34"	"Coolant temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"35"	"Lowest closed throttle voltage"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"36"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"37"	"Fuel pulse width"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"38"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"39"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"40"	"Fuel Trim (Bank 1)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"41"	"TEN (Datalink connector)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"42"	"Alternator load"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"43"	"Generator output"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"44"	"Tire size"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"45"	"Readiness function code"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"46"	"Fuel pump"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"47"	"Knock control"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"48"	"Idle switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"49"	"Clutch pedal switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (->2004/06) PCM"	"	"Live Parameters"	"50"	"Programmed keys"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	"	"Live Parameters"	"7"	"Vehicle speed"

"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"8"	"Ignition timing"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"11"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"12"	"Lambda probe 1, bank 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"13"	"Short term fuel trim bank 1 sensor 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"14"	"Distance driven with MIL warning lamp lit"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"15"	"EGR Motor Position Desired"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"16"	"Purge rate, EVAP system"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"17"	"Lambda probe 1, bank 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"18"	"Lambda Equivalence Ratio"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"19"	"Catalytic converter temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"20"	"Battery voltage"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"21"	"Engine load"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"22"	"Desired equivalence lambda ratio"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"23"	"Throttle valve relative position"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"24"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"25"	"Accelerator pedal sensor 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"26"	"Accelerator pedal sensor 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"27"	"Electronic throttle control desired"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"28"	"DTC Count (includes those needing no action)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"29"	"Number of current diagnostic trouble codes"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"30"	"MAP sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"31"	"Accelerator pedal sensor 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"32"	"Accelerator pedal sensor 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"33"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"34"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"35"	"Electronic throttle control desired"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"36"	"Electronic throttle control actual"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"37"	"Electric fan speed 3"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"38"	"Alternator warning lamp"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"39"	"Desired motor speed"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"40"	"Generator requested"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"41"	"AC switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"42"	"Brake"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"43"	"In gear"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"44"	"Power steering pressure switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"45"	"Refrigerant pressure switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"46"	"Electric fan speed 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"47"	"Electric fan speed 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"48"	"(MIL) control circuit"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"49"	"Intake Manifold Runner Control"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"50"	"A/C clutch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"51"	"Air inlet temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"52"	"Coolant temperature sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"53"	"Lowest closed throttle voltage"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"54"	"MAF (Mass Air Flow)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"55"	"Accelerator pedal position"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"56"	"Fuel pulse width"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"57"	"Intake manifold tuning valve"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"58"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"59"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"60"	"Fuel Trim (Bank 1)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"61"	"TEN (Datalink connector)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"62"	"Camshaft angle, actual"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"63"	"Camshaft difference, request - actual"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"64"	"Camshaft actuator duty cycle"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"65"	"Alternator load"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"66"	"Generator output"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"67"	"Tire size"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"68"	"Readiness function code"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"69"	"Knock control"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"70"	"Desired lambda value"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"71"	"Lambda value"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"72"	"Idle switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"73"	"Clutch pedal switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->)"	PCM'	"	"Live Parameters"	"74"	"Cruise control switch"

"Mazda"	"6"	"Engine Petrol"	"LF 2.0 (2004/06->) PCM"	""	"Live Parameters"	"75"	"Programmed keys"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"1"	"Manifold absolute pressure"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"2"	"Target speed (rpm)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"3"	"EGR valve stepping motor position"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"4"	"Air mass meter"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"5"	"Camshaft position sensor, requested duty cycle 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"6"	"Variable Valve Timing, Actual Position"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"7"	"Variable Valve Timing, differences between desired and actual value"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"8"	"Fuel pressure sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"9"	"Engine temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"10"	"Barometric pressure"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"11"	"Alternator warning lamp"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"12"	"Lowest closed throttle voltage"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"13"	"Fuel pulse width"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"14"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"15"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"16"	"Rear Lambda Sensor Fuel Trim - Bank 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"17"	"Target fuel pressure"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"18"	"Knock sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"19"	"Intake Manifold Runner Control"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"20"	"Intake manifold tuning valve"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"21"	"Accelerator pedal position 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"22"	"Accelerator pedal position 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"23"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"24"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"25"	"Electronic throttle control, desired"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"26"	"Idle switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"27"	"Electronic throttle control, actual"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"28"	"Air conditioning compressor cycling switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"29"	"Air conditioning signal"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"30"	"Refrigerant pressure switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"31"	"Fan 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"32"	"Fan 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"33"	"Fan 3 Control Circuit"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"34"	"Intake air shutter valve"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"35"	"Evaporative Emission Canister Purge, duty cycle"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"36"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"37"	"Alternator monitoring signal"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"38"	"Alternator voltage"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"39"	"Clutch pedal position sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"40"	"Clutch position"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"41"	"Gear engaged"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"42"	"Brake"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"43"	"Brake pressure switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"44"	"Fuel pump"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"45"	"MIL"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"46"	"Cruise control switch"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"47"	"TEN (Datalink connector)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"48"	"High pressure fuel pump"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"49"	"Air/fuel ratio"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"50"	"Actual air/fuel ratio"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"51"	"Fuel injection quantity"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"52"	"Fuel system status"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"53"	"Engine temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"54"	"Short term fuel trim 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"55"	"Long term fuel trim 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"56"	"Manifold absolute pressure"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"57"	"Rpm"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"58"	"Vehicle speed"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"59"	"Spark advance"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"60"	"IAT - Intake air temperature"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"61"	"Air mass meter"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"62"	"Throttle position sensor 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"63"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"64"	"Distance driven with MIL warning lamp lit"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"65"	"Fuel pressure sensor"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	""	"Live Parameters"	"66"	"Exhaust gas recirculation (EGR) valve, desired stepping motor position"

"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"67"	"Barometric pressure"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"68"	"Lambda (bank 1, sensor 1) Equivalence Ratio"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"69"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"70"	"Desired, catalyst temperature (bank 1, sensor 1)"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"71"	"ECU power drivers"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"72"	"Load"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"73"	"Lambda (bank 1, sensor 1) Desired Equivalence Ratio"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"74"	"Throttle valve relative position"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"75"	"Throttle position sensor 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"76"	"Accelerator pedal position 1"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"77"	"Accelerator pedal position 2"
"Mazda"	"6"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"78"	"Electronic throttle control, desired"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"1"	"Parking brake switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"2"	"Reverse gear switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"3"	"Brake fluid level"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"4"	"Rear fog lights"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"5"	"Hazard warning flashers"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"6"	"High beam switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"7"	"Turn lamp switch, left"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"8"	"Turn lamp switch, right"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"9"	"Wipers high speed"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"10"	"Wipers interval"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"11"	"Wipers slow speed"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"12"	"Front wiper park state"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"13"	"Rear wiper"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"14"	"Front washer"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"15"	"Rear washer"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"16"	"Driver`s door locking"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"17"	"Driver`s door unlocking"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"18"	"Driver door switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"19"	"Passenger door switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"20"	"Key lock switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"21"	"Key unlock warning switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"22"	"Trunk switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"23"	"Hood switch"
"Mazda"	"6"	"Generic electronic module"	"BCM/GEM"	"	"Live Parameters"	"24"	"Supply voltage"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Adaptations"	"1"	"Self test"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"2"	"Left front door"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"3"	"Right front door"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"4"	"Rear doors"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"5"	"Hood switch"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"6"	"Trunk"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"7"	"Hazard warning flashers"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"8"	"Rear wiper, interval"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"9"	"Left flashers required"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"10"	"Right flashers required"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"11"	"Driver door key lock switch"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"12"	"Door lock switch, passenger side and rear doors"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"13"	"Trunk unlocking switch"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"14"	"Central locker, lock switch"
"Mazda"	"6"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"15"	"Central locker, unlock switch"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Tire pressure, transponder 1"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Tire pressure, transponder 2"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"Tire pressure, transponder 3"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Tire pressure, transponder 4"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"Fuel level sensor"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"6"	"RPM-gauge"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"7"	"Coolant temperature"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"8"	"Speedometer"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"9"	"Ambient temperature"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"10"	"Number of keys"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"11"	"Supply voltage"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Total number of diagnostic trouble codes"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Speedgauge"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"RPM-gauge"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Coolant temperature"

"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"CAN communication with ABS"
"Mazda"	"6"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"6"	"CAN communication with PCM"
"Mazda"	"6"	"Other"	"LCM - Lighting control module"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"6"	"Other"	"LCM - Lighting control module"	"	"Live Parameters"	"2"	"Software version"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"1"	"Vehicle speed"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"2"	"Number of continous trouble codes"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"3"	"Number of trouble codes set due to diagnostic test"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"4"	"Stepper motor target position"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"5"	"Headlight inclination angle"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"6"	"Low beam supply voltage"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"7"	"Gas discharge lamp"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"8"	"Gas discharge lamp"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"9"	"Front level sensor"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"10"	"Rear level sensor"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"11"	"Stored offset of front level sensor"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"12"	"Stored offset of rear level sensor"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"13"	"Power supply"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"14"	"Software version"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"15"	"Part version suffix"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"16"	"Serial number, first 4 digits"
"Mazda"	"6"	"Other"	"LHID - Left side lamp control"	"	"Live Parameters"	"17"	"Serial number, last 4 digits"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"2"	"Number of trouble codes set due to diagnostic test"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"3"	"Stepper motor target position"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"4"	"Headlight inclination angle"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"5"	"Low beam supply voltage"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"6"	"Gas discharge lamp"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"7"	"Gas discharge lamp"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"8"	"Power supply"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"9"	"Software version"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"10"	"Part version suffix"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"11"	"Serial number, first 4 digits"
"Mazda"	"6"	"Other"	"RHID - Right side lamp control"	"	"Live Parameters"	"12"	"Serial number, last 4 digits"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Passenger seat belt reminder"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Drivers airbag, resistance"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Passenger airbag, resistance"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver`s pretensioner resistance"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner resistance"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Side impact airbag resistance, driver side"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Side impact airbag resistance, passenger side"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Curtain airbag resistance, driver side"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Curtain airbag resistance, passenger side"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Driver buckle switch status"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Passenger buckle switch status"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Status 'Deactivation switch passenger airbag'"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Passenger airbag disable switch"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Supply voltage"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Airbag, driver, stage 1"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Airbag, passenger, stage 1"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver pretensioner"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Driver side airbag"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Passenger side airbag"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Airbag, driver, stage 2"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Airbag, passenger, stage 2"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Driver-side airbag safety curtain"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Passenger-side airbag safety curtain"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Airbag, driver, stage 1"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Airbag, driver, stage 2"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Airbag, passenger, stage 1"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"15"	"Airbag, passenger, stage 2"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"16"	"Driver-side airbag safety curtain"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"17"	"Passenger-side airbag safety curtain"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"18"	"Driver side airbag"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"19"	"Passenger side airbag"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"20"	"Side impact sensor, driver"

"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"21"	"Side impact sensor, passenger"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"22"	"Crashsensor airbag front"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"23"	"Drivers pretensioner"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"24"	"Passenger pretensioner"
"Mazda"	"6"	"Restraints"	"Airbag"	"	"Live Parameters"	"25"	"Control unit power supply"
"Mazda"	"6"	"Steering"	"EPS"	"	"Live Parameters"	"1"	"Steering wheel rotational speed"
"Mazda"	"6"	"Steering"	"EPS"	"	"Live Parameters"	"2"	"Steering shaft torque 1"
"Mazda"	"6"	"Steering"	"EPS"	"	"Live Parameters"	"3"	"Steering shaft torque 2"
"Mazda"	"6"	"Steering"	"EPS"	"	"Live Parameters"	"4"	"Control unit power supply"
"Mazda"	"6"	"Steering"	"EPS"	"	"Live Parameters"	"5"	"Motor current"
"Mazda"	"6"	"Steering"	"EPS"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"6"	"Steering"	"EPS"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"Brake ON / OFF"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"ABS pump motor control"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"ABS warning lamp"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Outlet valve front left"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Outlet valve rear right"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"7"	"Outlet valve front right"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"8"	"Inlet valve front left"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"9"	"Inlet valve rear right"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"10"	"Inlet valve front right"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"11"	"ABS motor relay"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"12"	"Valve relay, ABS"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"13"	"Front left wheel speed sensor"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"14"	"Front right wheel speed sensor"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"15"	"Rear left wheel speed sensor"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"16"	"Rear right wheel speed sensor"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"17"	"Longitudinal acceleration"
"Mazda"	"BT-50"	"Brake System"	"ABS"	"	"Live Parameters"	"18"	"Battery voltage"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"1"	"Engine load"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"3"	"Intake manifold pressure sensor"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"4"	"Engine speed"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"5"	"Vehicle speed"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"6"	"IAT - Intake air temperature"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"7"	"MAF (Mass Air Flow)"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"8"	"Distance driven with MIL warning lamp lit"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"9"	"Rail pressure"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"10"	"Atmospheric pressure"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"11"	"Computer supply voltage"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"12"	"Outside temperature"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"13"	"Accelerator pedal sensor 1"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"14"	"Accelerator pedal sensor 2"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"15"	"DTC Count (includes those needing no action)"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"16"	"Total number of diagnostic trouble codes"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"17"	"Intake manifold pressure sensor"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"18"	"Accelerator pedal sensor 1"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"19"	"Accelerator pedal sensor 2"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"20"	"Turbo control"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"21"	"Idle speed, target value"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"22"	"Glow plug lamp"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"23"	"Exhaust gas recirculation solenoid valve 2"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"24"	"Intake air shutter valve"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"25"	"Intake air shutter valve 2"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"26"	"Air conditioning signal"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"27"	"Brake ON / OFF"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"28"	"In gear"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"29"	"Malfunction indicator lamp (MIL)"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"30"	"Air conditioning compressor cycling switch"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"31"	"IAT - Intake air temperature"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"32"	"Coolant temperature"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"33"	"Accelerator pedal position"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"34"	"Swirl control valve SCV"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"35"	"Atmospheric pressure"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"36"	"Clutch pedal position switch"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"37"	"Idle switch"

"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"38"	"Fuel temperature"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"39"	"Fuel injection pump flow control"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"40"	"Fuel injection pump flow control"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"41"	"Fuel injection pump control valve"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"42"	"Glow plug control"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"43"	"Warm up switch"
"Mazda"	"BT-50"	"Engine Diesel"	"WL-C 2.5 PCM"	"	"Live Parameters"	"44"	"Warm up solenoid"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Driver side airbag module resistance"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Passenger side, side airbag squib circuit, resistance"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver pretensioner"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner resistance"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Side impact airbag resistance, driver side"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Side impact airbag resistance, passenger side"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Driver pretensioner"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Passenger buckle switch status"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Airbag, driver, stage 1"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Passenger side no. 1 loop airbag circuit fault status"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Passenger side airbag"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Passenger side, side airbag fault status"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Side crash sensor mount or communication fault, front driver"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"15"	"Side crash sensor internal fault, front driver"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"16"	"Side crash sensor mount or communication fault, front passenger"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"17"	"Side crash sensor internal fault, front passenger"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"18"	"Drivers pretensioner"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"19"	"Passenger pretensioner"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"20"	"On demand driver side no. 1 loop airbag circuit fault status"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"21"	"On demand passenger side no. 1 loop airbag circuit fault status"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"22"	"On demand driver side, side airbag fault status"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"23"	"On demand passenger side, side airbag fault status"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"24"	"On demand side crash sensor mount or communication fault, front driver"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"25"	"On demand side crash sensor internal fault, front passenger"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"26"	"On demand side crash sensor mount or communication fault, front passenger"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"27"	"On demand side crash sensor internal fault, front passenger"
"Mazda"	"BT-50"	"Restraints"	"Airbag"	"	"Live Parameters"	"28"	"Airbag control module ignition voltage no 1"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Number of continuous DTCs stored"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"Engine rpm sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"Traction control valve, left"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"Traction control valve, right"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Stability control valve, left"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Stability control valve, right"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"7"	"Brake pedal"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"8"	"Pump motor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"9"	"ABS warning lamp"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"10"	"Outlet valve front left"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"11"	"Outlet valve rear left"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"12"	"Outlet valve front right"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"13"	"Outlet valve rear right"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"14"	"Inlet valve front left"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"15"	"Inlet valve rear left"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"16"	"Inlet valve front right"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"17"	"Inlet valve rear right"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"18"	"Pump motor relay"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"19"	"Voltage supply valve relay"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"20"	"Steering angle sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"21"	"Front left wheel speed sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"22"	"Front right wheel speed sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"23"	"Rear left wheel speed sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"24"	"Rear right wheel speed sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"25"	"Lateral acceleration"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"26"	"Yaw rate value"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"27"	"Master cylinder pressure sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"28"	"Throttle position sensor"
"Mazda"	"CX-7"	"Brake System"	"ABS"	"	"Live Parameters"	"29"	"Battery voltage"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"3"	"Short term fuel trim 1"

"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"4"	"Long term fuel trim 1"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"6"	"Engine rpm sensor"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"8"	"Spark advance"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"11"	"Throttle position sensor 1"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"12"	"Lambda probe 2, bank 1"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"13"	"Short term fuel trim bank 1 sensor 2"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"14"	"Distance driven with MIL on (km)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"15"	"Fuel pressure sensor"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"16"	"EGR Motor Position Desired"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"17"	"Evaporative emission valve duty cycle"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"18"	"Atmospheric pressure"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"19"	"Desired equivalence lambda ratio"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"20"	"Lambda probe 1, bank 1"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"21"	"Catalyst Temperature Sensor (Bank 1)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"22"	"Battery voltage"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"23"	"Engine control module"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"24"	"Engine load"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"25"	"Desired equivalence lambda ratio"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"26"	"Throttle valve relative position"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"27"	"Throttle position sensor 2"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"28"	"Accelerator pedal position 1"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"29"	"Accelerator pedal position 2"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"30"	"Electronic throttle control desired"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"31"	"DTC Count (includes those needing no action)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"32"	"MAP sensor"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"33"	"Accelerator pedal position 1"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"34"	"Accelerator pedal position 2"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"35"	"Throttle position sensor 1"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"36"	"Throttle position sensor 2"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"37"	"Electronic throttle control desired"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"38"	"Variable Fan Duty Cycle"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"39"	"Electronic throttle control actual"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"40"	"Alternator warning lamp"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"41"	"Desired idle speed"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"42"	"Alternator voltage"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"43"	"EGR valve stepping motor position"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"44"	"A/C requested"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"45"	"Brake pedal"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"46"	"Power steering pressure switch"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"47"	"Refrigerant pressure switch"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"48"	"Intake Manifold Runner Control"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"49"	"Malfunction indicator lamp (MIL)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"50"	"Air conditioning compressor cycling switch"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"51"	"IAT - Intake air temperature"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"52"	"Coolant temperature"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"53"	"Lowest closed throttle voltage"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"54"	"MAF (Mass Air Flow)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"55"	"Accelerator pedal position"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"56"	"Fuel pulse width"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"57"	"Lambda probe heating (bank 1, sensor 1)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"58"	"Lambda probe heating (bank 1, sensor 2)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"59"	"Fuel Trim (Bank 1)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"60"	"TEN (Datalink connector)"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"61"	"Fuel pressure sensor"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"62"	"Atmospheric pressure"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"63"	"Actual valve timing"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"64"	"Difference between target and actual valve timing"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"65"	"Camshaft position commanded duty cycle"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"66"	"Waste gate"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"67"	"Alternator current"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"68"	"Alternator output voltage"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"69"	"Tire size"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"70"	"High pressure fuel pump"

"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"71"	"Lambda regulation"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"72"	"Fuel pump"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"73"	"Boost temperature sensor"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"74"	"Knocking"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"75"	"Air/fuel ratio"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"76"	"Actual air/fuel ratio"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"77"	"Injection amount"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"78"	"Boost temperature sensor"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"79"	"Brake pressure applied switch"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"80"	"Clutch pedal position switch"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"81"	"Idle switch"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"82"	"Clutch pedal position switch"
"Mazda"	"CX-7"	"Engine Petrol"	"L3 2.3 PCM"	"	"Live Parameters"	"83"	"Switch speed control"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"1"	"Number of continuous DTCs stored"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"2"	"AC switch"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"3"	"Rear door switch"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"4"	"Hazard warning flashers"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"5"	"Hood switch"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"6"	"Parking brake switch"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"7"	"Boot lid switch"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"8"	"Rear wiper, interval"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"9"	"Brake fluid level"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"10"	"Central locking switch"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"11"	"Door lock switch, driver door"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"12"	"Oil pressure switch"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"13"	"Turn lamp switch, left"
"Mazda"	"CX-7"	"Generic electronic module"	"GEM"	"	"Live Parameters"	"14"	"Turn lamp switch, right"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"1"	"Vehicle speed"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"2"	"Number of continuous DTCs stored"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"3"	"Revolution sensor"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"4"	"Number of keys"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"5"	"Buzzer"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"6"	"All door switch"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"7"	"Door switch, driver door"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"8"	"Request switch, driver door"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"9"	"Request switch, passenger door"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"10"	"Key in ignition"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"11"	"Ignition switch status"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"12"	"Ignition 1"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"13"	"Immobilizer status"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"14"	"Door lock switch, driver side"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"15"	"Accessory power"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"16"	"Trunk switch"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"17"	"Supply voltage"
"Mazda"	"CX-7"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"18"	"Number of card keys registered"
"Mazda"	"CX-7"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Number of continuous DTCs stored"
"Mazda"	"CX-7"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Odometer"
"Mazda"	"CX-7"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"Speedometer"
"Mazda"	"CX-7"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Revolution sensor"
"Mazda"	"CX-7"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"Coolant temperature"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continuous DTCs stored"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Drivers airbag, resistance"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Passenger airbag, resistance"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver's pretensioner resistance"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner resistance"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Side impact airbag resistance, driver side"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Side impact airbag resistance, passenger side"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Driver buckle switch status"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Passenger buckle switch status"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Passenger-side air bag Cut-off switch"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Passenger airbag deployment status"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Curtain airbag resistance, driver side"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Curtain airbag resistance, passenger side"
"Mazda"	"CX-7"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Supply voltage, ignition"
"Mazda"	"MX-5"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"MX-5"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"Brake pedal switch"
"Mazda"	"MX-5"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"Rear right speed sensor"

"Mazda"	"MX-5"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"Rear left speed sensor"
"Mazda"	"MX-5"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Front right speed sensor"
"Mazda"	"MX-5"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Front left speed sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"8"	"Ignition timing"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"11"	"Throttle position"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"12"	"Lambda sensor 1"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"13"	"Short term fuel trim bank 1 sensor 1"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"14"	"Lambda sensor 2"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"15"	"Distance driven with MIL warning lamp lit"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"16"	"EGR Motor Position Desired"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"17"	"Purge rate, EVAP system"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"18"	"Catalytic converter temperature"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"19"	"Battery voltage"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"20"	"Engine load"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"21"	"Lambda target value, bank 1"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"22"	"Throttle valve relative position"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"23"	"DTC Count (includes those needing no action)"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"24"	"Number of current diagnostic trouble codes"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"25"	"MAP sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"26"	"Variable Fan Duty Cycle"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"27"	"Alternator warning lamp"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"28"	"Desired motor speed"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"29"	"Generator requested"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"30"	"AC requested"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"31"	"Brake"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"32"	"In gear"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"33"	"Refrigerant pressure switch"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"34"	"(MIL) control circuit"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"35"	"Intake Manifold Runner Control"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"36"	"A/C clutch"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"37"	"Air inlet temperature sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"38"	"Coolant temperature sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"39"	"IAC (Idle air control)"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"40"	"Throttle position sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"41"	"Lowest closed throttle voltage"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"42"	"MAF (Mass Air Flow)"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"43"	"Fuel pulse width"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"44"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"45"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"46"	"Fuel trim, Bank1 Sensor2"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"47"	"TEN (Datalink connector)"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"48"	"Alternator load"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"49"	"Generator output"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"50"	"Tire size"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"51"	"Readiness function code"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"52"	"Fuel pump"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"53"	"Knock control"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"54"	"Idle switch"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"55"	"Clutch pedal switch"
"Mazda"	"MX-5"	"Engine Petrol"	"L8 1.8 PCM"	"	"Live Parameters"	"56"	"Clutch pedal switch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"2"	"Coolant temperature"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"5"	"MAP sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"6"	"Engine speed"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"7"	"Vehicle speed"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"8"	"Ignition timing"

"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"9"	"IAT - Intake air temperature"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"10"	"MAF (Mass Air Flow)"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"11"	"Throttle position sensor 1"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"12"	"Lambda probe 1, bank 2"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"13"	"Short term fuel trim bank 1 sensor 2"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"14"	"Distance driven with MIL warning lamp lit"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"15"	"EGR Motor Position Desired"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"16"	"Purge rate, EVAP system"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"17"	"Lambda probe 1, bank 1"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"18"	"Lambda Equivalence Ratio"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"19"	"Catalytic converter temperature"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"20"	"Battery voltage"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"21"	"Engine load"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"22"	"Desired equivalence lambda ratio"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"23"	"Throttle valve relative position"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"24"	"Throttle position sensor 2"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"25"	"Accelerator pedal sensor 1"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"26"	"Accelerator pedal sensor 2"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"27"	"Electronic throttle control desired"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"28"	"DTC Count (includes those needing no action)"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"29"	"Number of current diagnostic trouble codes"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"30"	"MAP sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"31"	"Accelerator pedal sensor 1"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"32"	"Accelerator pedal sensor 2"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"33"	"Throttle position sensor 1"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"34"	"Throttle position sensor 2"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"35"	"Electronic throttle control desired"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"36"	"Electronic throttle control actual"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"37"	"Electric fan speed 3"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"38"	"Alternator warning lamp"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"39"	"Desired motor speed"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"40"	"Generator requested"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"41"	"AC switch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"42"	"Brake"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"43"	"In gear"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"44"	"Power steering pressure switch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"45"	"Refrigerant pressure switch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"46"	"Electric fan speed 1"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"47"	"Electric fan speed 2"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"48"	"(MIL) control circuit"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"49"	"Intake Manifold Runner Control"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"50"	"A/C clutch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"51"	"Air inlet temperature sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"52"	"Coolant temperature sensor"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"53"	"Lowest closed throttle voltage"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"54"	"MAF (Mass Air Flow)"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"55"	"Accelerator pedal position"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"56"	"Fuel pulse width"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"57"	"Intake manifold tuning valve"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"58"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"59"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"60"	"Fuel Trim (Bank 1)"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"61"	"TEN (Datalink connector)"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"62"	"Alternator load"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"63"	"Generator output"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"64"	"Tire size"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"65"	"Readiness function code"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"66"	"Knock control"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"67"	"Desired lambda value"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"68"	"Lambda value"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"69"	"Idle switch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"70"	"Clutch pedal switch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"71"	"Cruise control switch"
"Mazda"	"MX-5"	"Engine Petrol"	"LF 2.0 PCM"	"	"Live Parameters"	"72"	"Programmed keys"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"1"	"Vehicle speed"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"2"	"Total number of diagnostic trouble codes"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"3"	"Engine speed"

"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"4"	"Number of enabled keys"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"5"	"Door lock switch, driver side"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"6"	"B+ to accessories"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"7"	"B+ via ignition switch"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"8"	"Switch, central locking, passenger side"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"9"	"Ignition switch status"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"10"	"Door switch, driver door"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"11"	"Key in ignition"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"12"	"Switch, central locking, driver's side"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"13"	"All door switch"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"14"	"Trunk switch"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"15"	"Immobilisation status"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"16"	"Switch, opening, tailgate"
"Mazda"	"MX-5"	"Immobiliser"	"RKE - Remote keyless entry"	"	"Live Parameters"	"17"	"Programmed keys"
"Mazda"	"MX-5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Total number of diagnostic trouble codes"
"Mazda"	"MX-5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Speedgauge"
"Mazda"	"MX-5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"RPM-gauge"
"Mazda"	"MX-5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Coolant temperature"
"Mazda"	"MX-5"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"Number of keys"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Airbag, driver, stage 1"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Airbag, passenger, stage 1"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver pretensioner"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Driver side airbag"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Passenger side airbag"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Airbag, driver, stage 2"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Airbag, passenger, stage 2"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Side impact sensor, driver"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Side impact sensor, passenger"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Crashsensor airbag front"
"Mazda"	"MX-5"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Control unit power supply"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"2"	"Engine speed"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"3"	"Front RH traction control valve"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"4"	"Front LH traction control valve"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"5"	"Right stability control outlet valve"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"6"	"Left stability control outlet valve"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"7"	"Brake fluid level"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"8"	"Brake pedal"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"9"	"Hydraulic pump ABS"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"10"	"ABS warning lamp"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"11"	"Brake system warning lamp"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"12"	"Outlet valve front left"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"13"	"Outlet valve front right"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"14"	"Outlet valve rear left"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"15"	"Outlet valve rear right"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"16"	"Inlet valve front left"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"17"	"Inlet valve front right"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"18"	"Inlet valve rear left"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"19"	"Inlet valve rear right"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"20"	"ABS motor relay"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"21"	"Valve relay, ABS"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"22"	"Steering angle, zero reference from ignition on"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"23"	"Front left wheel speed sensor"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"24"	"Front right wheel speed sensor"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"25"	"Rear left wheel speed sensor"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"26"	"Rear right wheel speed sensor"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"27"	"Lateral acceleration sensor"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"28"	"Yaw rate value"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"29"	"Master cylinder pressure sensor"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"30"	"Throttle position sensor status"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"31"	"CAN communication with PCM"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"32"	"CAN communication with IC"
"Mazda"	"RX-8"	"Brake System"	"ABS"	"	"Live Parameters"	"33"	"Control unit power supply"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"1"	"Fuel system status"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"2"	"Coolant temperature"

"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"3"	"Short term fuel trim"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"4"	"Long term fuel trim"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"5"	"Engine speed"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"6"	"Vehicle speed"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"7"	"Ignition timing"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"8"	"IAT - Intake air temperature"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"9"	"MAF (Mass Air Flow)"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"10"	"Throttle position sensor 1"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"11"	"Lambda probe 1, bank 2"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"12"	"Short term fuel trim bank 1 sensor 2"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"13"	"Distance driven with MIL warning lamp lit"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"14"	"Purge rate, EVAP system"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"15"	"Lambda probe 1, bank 1"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"16"	"Lambda Equivalence Ratio"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"17"	"Catalytic converter temperature"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"18"	"Battery voltage"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"19"	"Engine load"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"20"	"Desired equivalence lambda ratio"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"21"	"Throttle valve relative position"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"22"	"Throttle position sensor 2"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"23"	"Accelerator pedal sensor 1"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"24"	"Accelerator pedal sensor 2"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"25"	"Electronic throttle control desired"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"26"	"DTC Count (includes those needing no action)"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"27"	"Number of current diagnostic trouble codes"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"28"	"Accelerator pedal sensor 1"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"29"	"Accelerator pedal sensor 2"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"30"	"Throttle position sensor 1"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"31"	"Throttle position sensor 2"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"32"	"Electronic throttle control desired"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"33"	"Electronic throttle control actual"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"34"	"Alternator warning lamp"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"35"	"Desired motor speed"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"36"	"Generator requested"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"37"	"AC switch"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"38"	"Brake"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"39"	"In gear"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"40"	"Power steering pressure switch"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"41"	"Refrigerant pressure switch"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"42"	"Electric fan speed 1"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"43"	"Electric fan speed 2"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"44"	"(MIL) control circuit"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"45"	"Intake Manifold Runner Control"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"46"	"A/C clutch"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"47"	"Air inlet temperature sensor"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"48"	"Coolant temperature sensor"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"49"	"Lowest closed throttle voltage"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"50"	"MAF (Mass Air Flow)"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"51"	"Accelerator pedal position"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"52"	"Fuel pulse width"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"53"	"HO2S Heater Control Circuit (Bank 1, Sensor 1)"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"54"	"HO2S Heater Control Circuit (Bank 1, Sensor 2)"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"55"	"Fuel Trim (Bank 1)"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"56"	"TEN (Datalink connector)"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"57"	"Alternator load"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"58"	"Generator output"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"59"	"Tire size"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"60"	"Readiness function code"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"61"	"Knock control"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"62"	"Idle switch"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"63"	"Clutch pedal switch"
"Mazda"	"RX-8"	"Engine Petrol"	"3B 1.3 (141KW<->192KM) PCM"	"	"Live Parameters"	"64"	"Cruise control switch"
"Mazda"	"RX-8"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"1"	"Total number of diagnostic trouble codes"
"Mazda"	"RX-8"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"2"	"Speedgauge"
"Mazda"	"RX-8"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"3"	"RPM-gauge"
"Mazda"	"RX-8"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"4"	"Coolant temperature"
"Mazda"	"RX-8"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"5"	"CAN communication with ABS"

"Mazda"	"RX-8"	"Instrument / Dashboard"	"IC"	"	"Live Parameters"	"6"	"CAN communication with PCM"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"2"	"Airbag, driver, stage 1"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"3"	"Airbag, passenger, stage 1"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"4"	"Driver pretensioner"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"5"	"Passenger pretensioner"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"6"	"Driver side airbag"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"7"	"Passenger side airbag"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"8"	"Airbag, driver, stage 2"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"9"	"Airbag, passenger, stage 2"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"10"	"Driver-side airbag safety curtain"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"11"	"Passenger-side airbag safety curtain"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"12"	"Airbag, driver, stage 1"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"13"	"Airbag, driver, stage 2"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"14"	"Airbag, passenger, stage 1"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"15"	"Airbag, passenger, stage 2"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"16"	"Driver-side airbag safety curtain"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"17"	"Passenger-side airbag safety curtain"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"18"	"Driver side airbag"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"19"	"Passenger side airbag"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"20"	"Side impact sensor, driver"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"21"	"Side impact sensor, passenger"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"22"	"Crashsensor airbag front"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"23"	"Drivers pretensioner"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"24"	"Passenger pretensioner"
"Mazda"	"RX-8"	"Restraints"	"Airbag"	"	"Live Parameters"	"25"	"Control unit power supply"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"1"	"Number of continous trouble codes"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"2"	"Engine speed"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"3"	"Power supply"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"4"	"Vehicle speed"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"5"	"Actual motor current"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"6"	"Pump engine speed, actual value"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"7"	"Pump engine speed desired value"
"Mazda"	"RX-8"	"Steering"	"EPS"	"	"Live Parameters"	"8"	"Steering angle sensor"